



Re-circulating valve Fitting Instructions

Rev 1.0

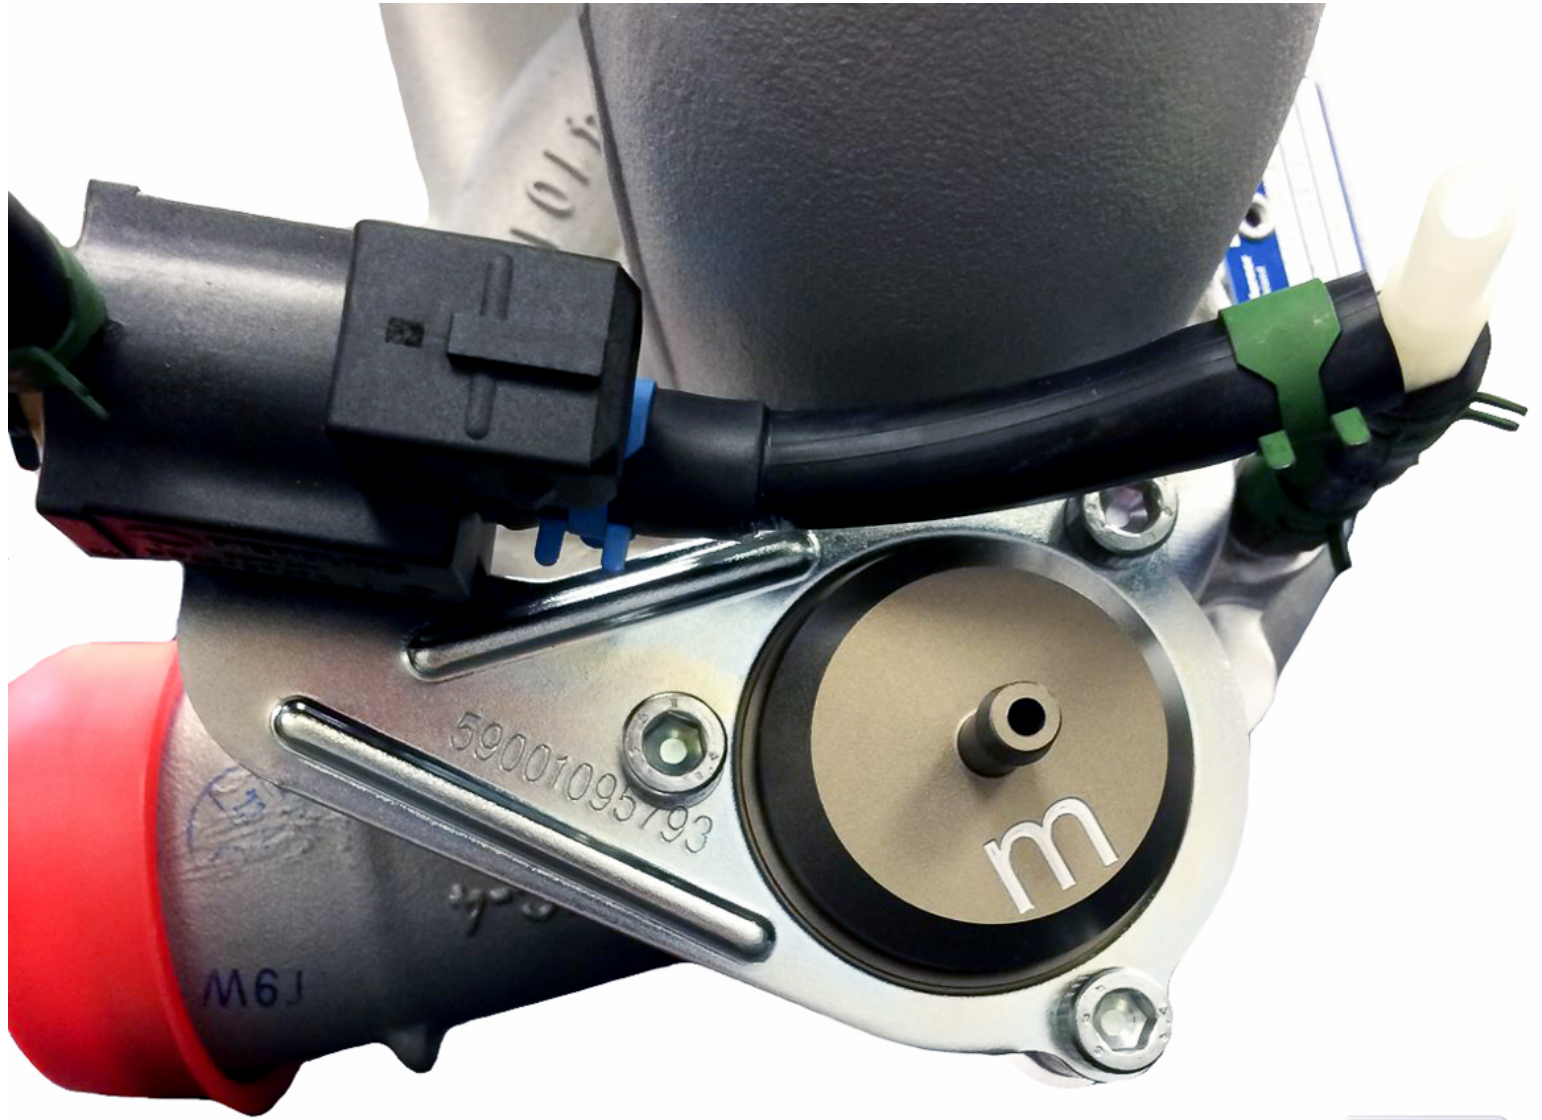


Fig 1.



Remove the right wheel to gain access to the re-circ valve through the wheel arch.



Fig 2)
Use a ball-head allen key to undo the three retaining bolts in the standard re-circ valve.



Fig 3)
Withdraw the standard valve and disconnect the vacuum pipe using suitable clips on the hose clamp.



Fig 4)
Replace the vacuum hose on the Mountune re-circ valve using the same hose clip.



Fig 5)

Re-fit the uprated valve in the original position. The 'm' on the valve face should be situated in the orientation shown in Fig 1 (12 o'clock D

Tighten the three bolts and re-fit the wheel.

Fitting ends.