

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020

# PRIOR TO INSTALLATION READ THESE INSTRUCTION COMPETELY For questions, Call the FORD PERFORMANCE Techline 1-800-367-3788

Please visit <a href="https://www.performanceparts.ford.com">https://www.performanceparts.ford.com</a> for warranty information

#### Bill of Materials

- 1. Front SMOKED CHROME OVAL
- 2. Rear SMOKED CHROME OVAL








NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020

#### **Front Oval**

#### Removal

**NOTE:** Removal steps in this procedure may contain installation details.


- 1. Remove the front wheels and tires. Refer to: Wheel and Tire (204-04A Wheels and Tires, Removal and Installation).
- 2. On both sides.
  - 1. Remove the push pin.
  - 2. Remove the screws. *Torque*: 13 lb.in (1.5 Nm)
  - 3. Release tab and remove the stone deflector

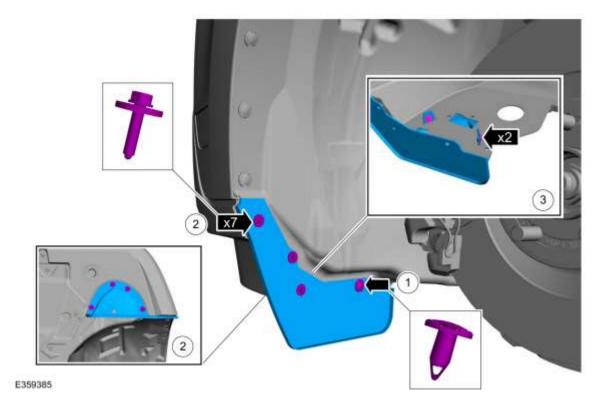

3. Remove the screws and the engine under shield. Torque: 19 lb.in (2.2 Nm)




NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020

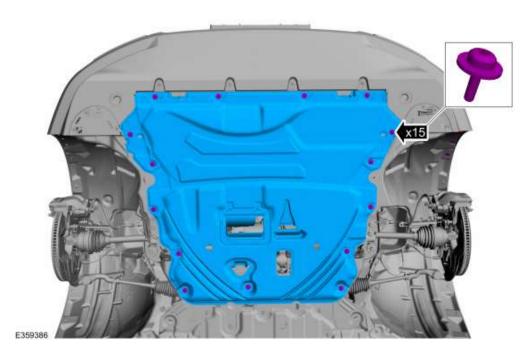

4. On both sides.

Remove the push pins and position the fender liner aside.

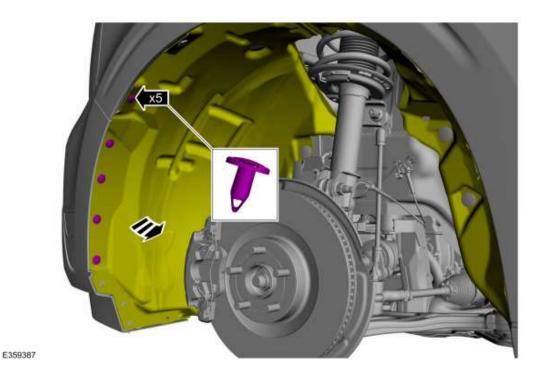


Ford Factory Shop Manual purchase options <a href="https://www.motorcraftservice.com">www.motorcraftservice.com</a>




NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020

5. Remove the screws. *Torque*: 13 lb.in (1.5 Nm)

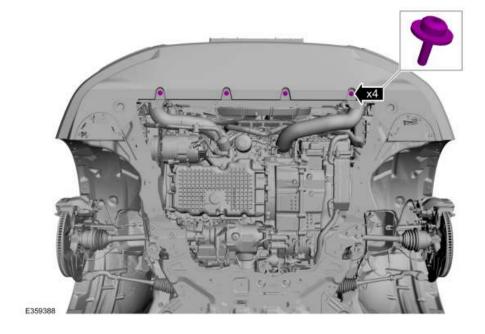

6. Disconnect the front bumper cover harness electrical connector.

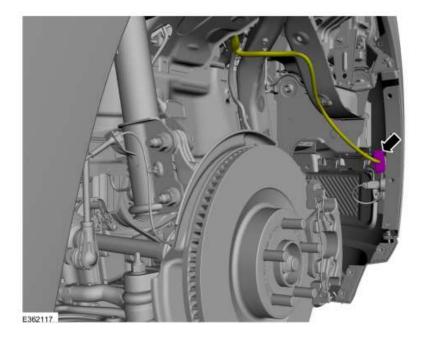




NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020

7. On both sides.


Remove the front bumper cover to fender bracket bolts and release the tab.

Torque: 53 lb.in (6 Nm)

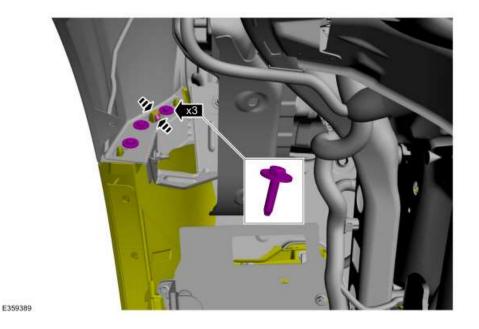

8. Remove the screws and release the tabs.

*Torque*: 36 lb.in (4.1 Nm)

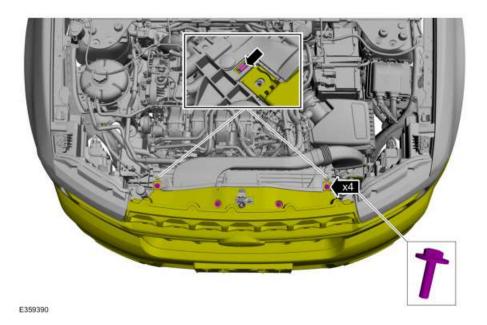




NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020


9. Release the clips and remove the front bumper cover.

NOTE: This step requires the aid of another technician

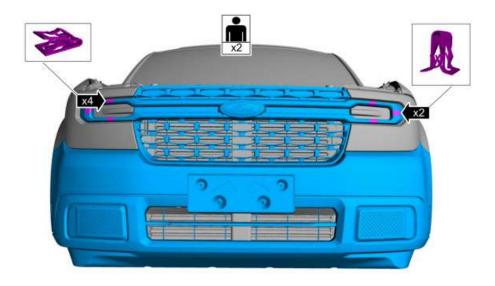

E359391

10. Remove the screws and the front bumper cover reinforcement mounting bracket. *Torque*: 18 lb.in (2 Nm)

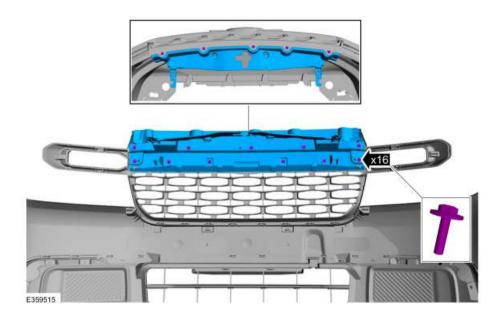


Ford Factory Shop Manual purchase options <a href="https://www.motorcraftservice.com">www.motorcraftservice.com</a>




NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020

11. Release the tabs and remove the radiator grille molding.

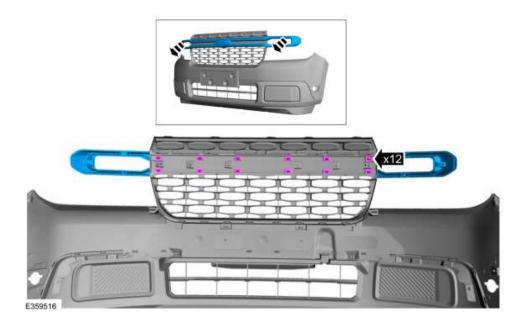

12. Remove the push nuts and the front bumper cover emblem. Use the General Equipment: Hot Air Gun

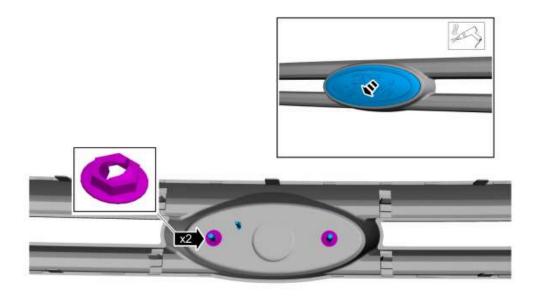

E359517

Ford Factory Shop Manual purchase options <a href="https://www.motorcraftservice.com">www.motorcraftservice.com</a>



NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020

13. To assemble, reverse the disassembly procedure.


#### Rear Oval

1. Remove the screws and the tailgate access panel. Torque: 22 lb.in (2.5 Nm)



E357648


2. Disconnect the electrical connector, remove the nuts, release the clip and remove the rear badge assembly. *Torque*: 36 lb.in (4.1 Nm)

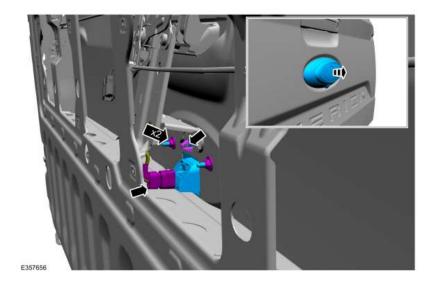



NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020

3. Remove the screws and the rear view camera retaining plate

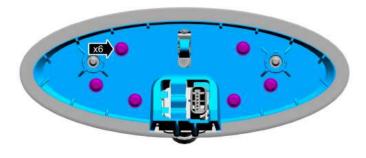

E357657

4. To install, reverse the removal procedure