



FORD PERFORMANCE

M-F150-W8
2021-23MY F-150 (4X4 Super Crew Cab)
Dark Trail Package

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF
FORD PERFORMANCE PARTS © Ford Motor Company 2020

PRIOR TO INSTALLATION READ THESE INSTRUCTIONS COMPLETELY
For questions, Call the FORD PERFORMANCE Techline 1-800-367-3788

Please visit <https://www.performanceparts.ford.com> for warranty information



2025MY F-150 Shown

Ford Factory Shop Manual purchase options www.motorcraftservice.com



M-F150-W8
2021-23MY F-150 (4X4 Super Crew Cab)
Dark Trail Package

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF
FORD PERFORMANCE PARTS © Ford Motor Company 2020

Package Contents:

<u>Description</u>	<u>Quantity</u>
Dark Trail Body Side Graphics	1
Rocker Panel Aero Shield Kit (XL, STX, XLT)	1
Matte Black Wheels	4
Black Center Caps	4
Black Lug Nut Kit	1
TPMS Kit	1
Off-Road Suspension Kit	1


Installation Section:

1. [Bodyside Graphics](#)
2. [Rocker Panel Aero Shield Kit \(XL, STX, XLT\)](#)
3. [Off-Road Suspension Kit](#)
 - 3a [TPMS, Wheels, Tires](#)
 - 3b [Service Procedures](#)

Ford Factory Shop Manual purchase options www.motorcraftservice.com

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020

1. Body Side Graphics

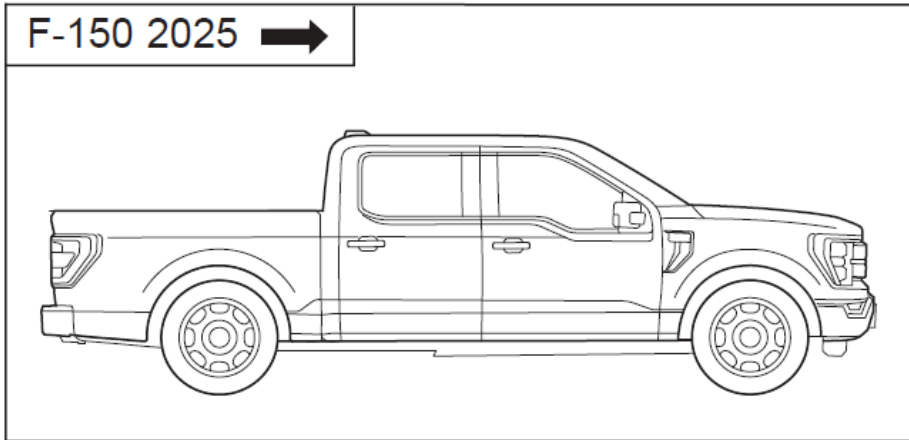

PERSONAL INJURY



VEHICLE DAMAGE



INCORRECT



CORRECT



SEE MANUAL

A




B TOOLS REQUIRED:

SOAP AND WATER SOLUTION




SQUEEGEE

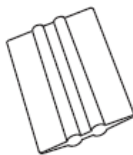

ALCOHOL WIPES



SOFT CLOTH

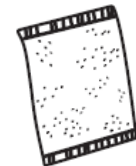

Ford Factory Shop Manual purchase options www.motorcraftservice.com



FORD PERFORMANCE

M-F150-W8 2021-23MY F-150 (4X4 Super Crew Cab) Dark Trail Package

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020


 
1




NOTE: THE ROOM TEMPERATURE AND SURFACE TEMPERATURE MUST BE NO LOWER THAN 68 DEGREES FAHRENHEIT (20° C) OR HIGHER THAN 90 DEGREES FAHRENHEIT (32° C) TO ENSURE PROPER INSTALLATION.

2


NOTE: CLEAN SURFACE USING DILUTED RUBBING ALCOHOL (50/50) OR AN ALCOHOL WIPE TO REMOVE DIRT AND GREASE. REMOVE RESIDUE FROM AREA AND ALLOW AREA TO DRY THOROUGHLY.

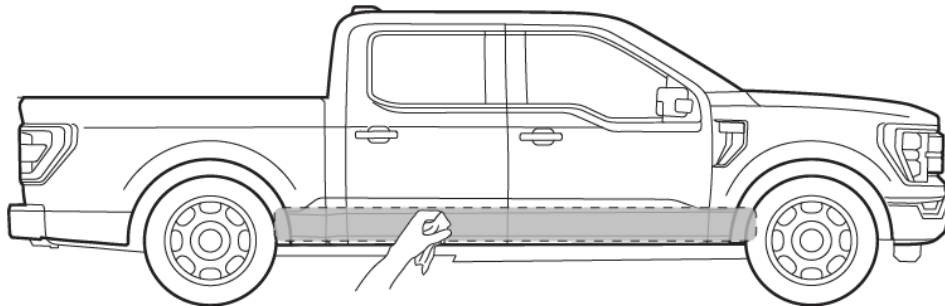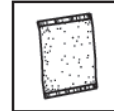


3

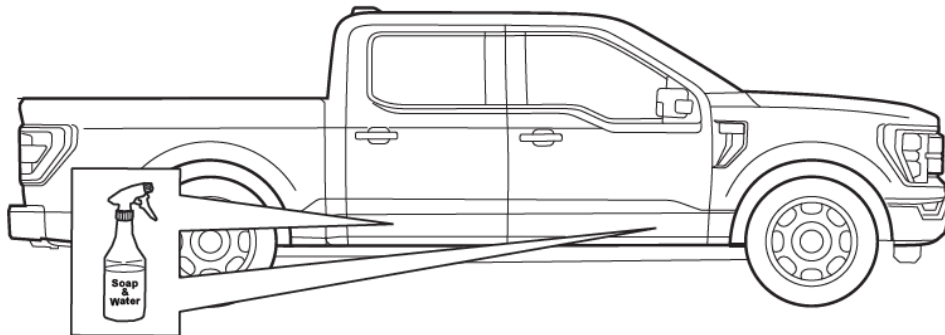

4

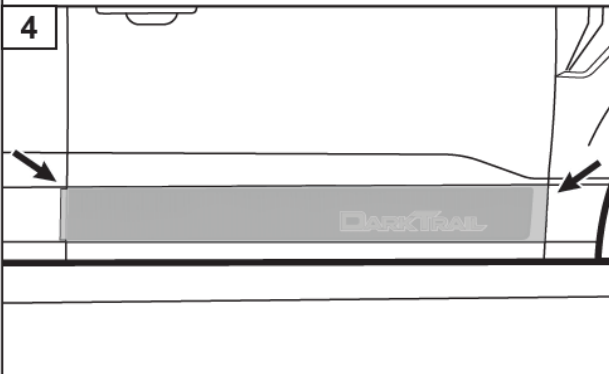

5

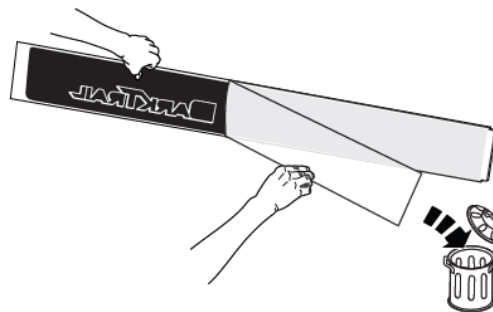


Ford Factory Shop Manual purchase options www.motorcraftservice.com



FORD PERFORMANCE

M-F150-W8
2021-23MY F-150 (4X4 Super Crew Cab)
Dark Trail Package

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020

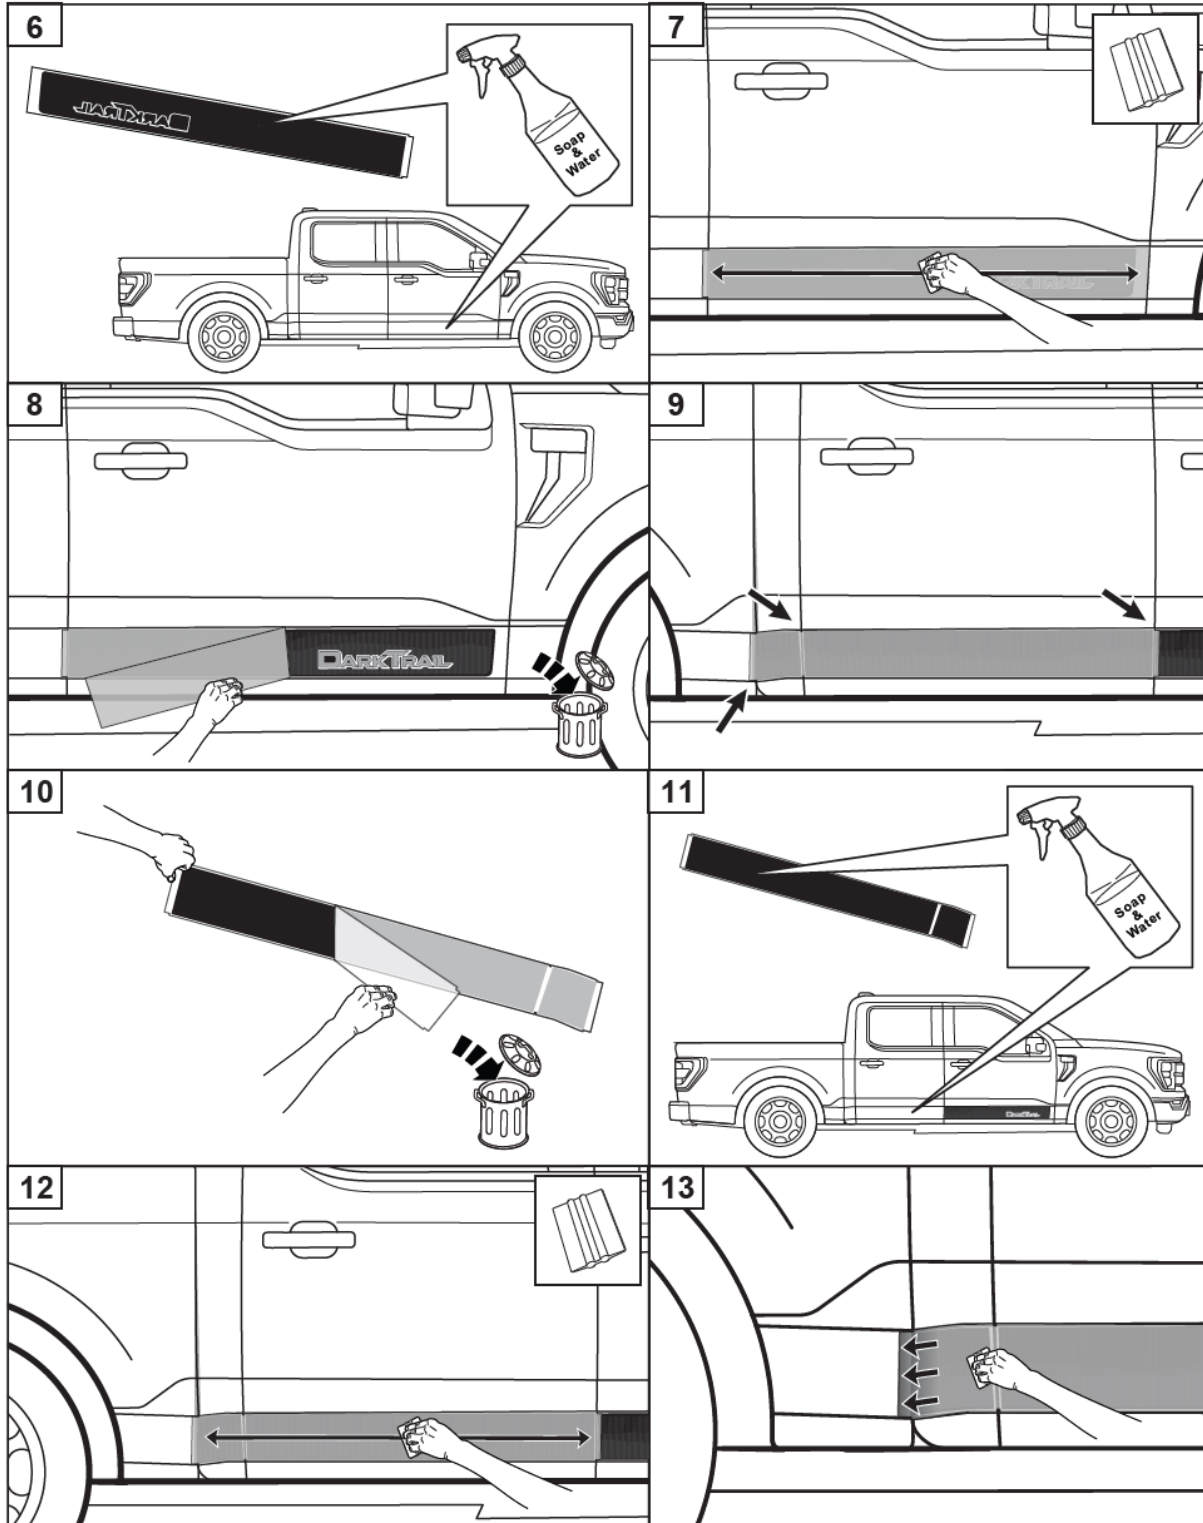


Ford Factory Shop Manual purchase options www.motorcraftservice.com



FORD PERFORMANCE

M-F150-W8
2021-23MY F-150 (4X4 Super Crew Cab)
Dark Trail Package

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020

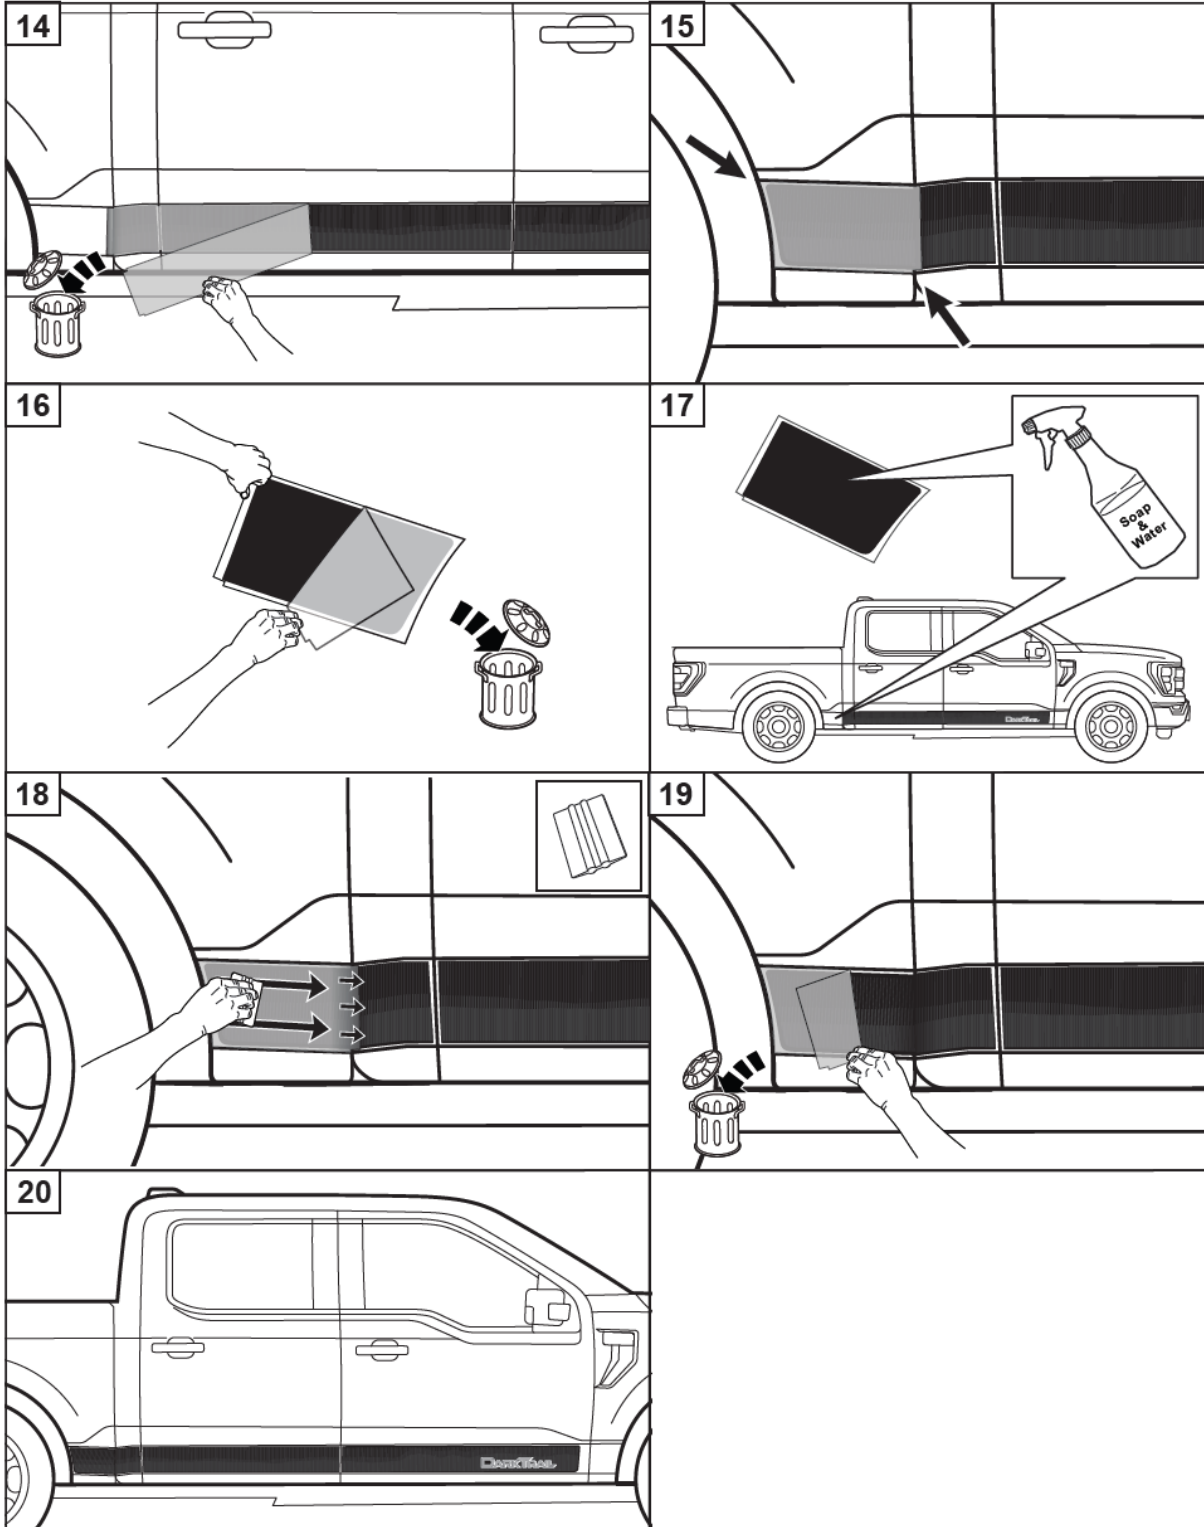

Ford Factory Shop Manual purchase options www.motorcraftservice.com

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020

2. Rocker Panel Aero Shield Kit (XL, STX, XLT)

Special Tool(s) / General Equipment



3.1 NOTE: XL, STX, XLT Trim Series Only

Remove the 3 bolts.

Right side shown, Left side similar.

Torque: 15 lb.in (1.7 Nm)



3.2 Pop out the retainer clips and remove the rocker panel aero piece.

Installation

5.3 To install, reverse the removal procedure.

Ford Factory Shop Manual purchase options www.motorcraftservice.com



M-F150-W8
2021-23MY F-150 (4X4 Super Crew Cab)
Dark Trail Package

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF
FORD PERFORMANCE PARTS © Ford Motor Company 2020

3. Off-Road Suspension Kit

Kit includes:

- 2 Assembled Front Coil-Over Shock Assemblies
- 2 Rear Shock Assemblies w/ Remote Reservoir Brackets
- 2 Half Shaft Nut - N802827-S440
- 2 Stabilizer Bar Link Nut - W520215-S440
- 2 Outer Tie Rod End Nut - W520215-S440
- 2 Front Upper Control Arm Ball Joint Nut - W717969-S440
- 4 Rear Shock Bolt – W506545-S439
- 2 Rear Upper Shock Nut – W529214-S440
- 2 Rear Lower Shock Nut – W716771-S440

Sections:

- a. Vehicle Lifting Points
- b. Front Assembly Removal
- c. Front Assembly Installation
- d. Rear Assembly Removal
- e. Rear Assembly Installation
- f. Tire and Wheel Installation
- g. Wheel Alignment
- h. Cruise Control Radar Alignment
- i. Headlight and Fog Light Aim Adjustment
- j. Fastener Torque Specifications


Ford Factory Shop Manual purchase options www.motorcraftservice.com

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020

Vehicle Lifting Points

With the vehicle in NEUTRAL, position it on a hoist.

Refer to: Jacking and Lifting - Overview (100-02 Jacking and Lifting, Description and Operation).

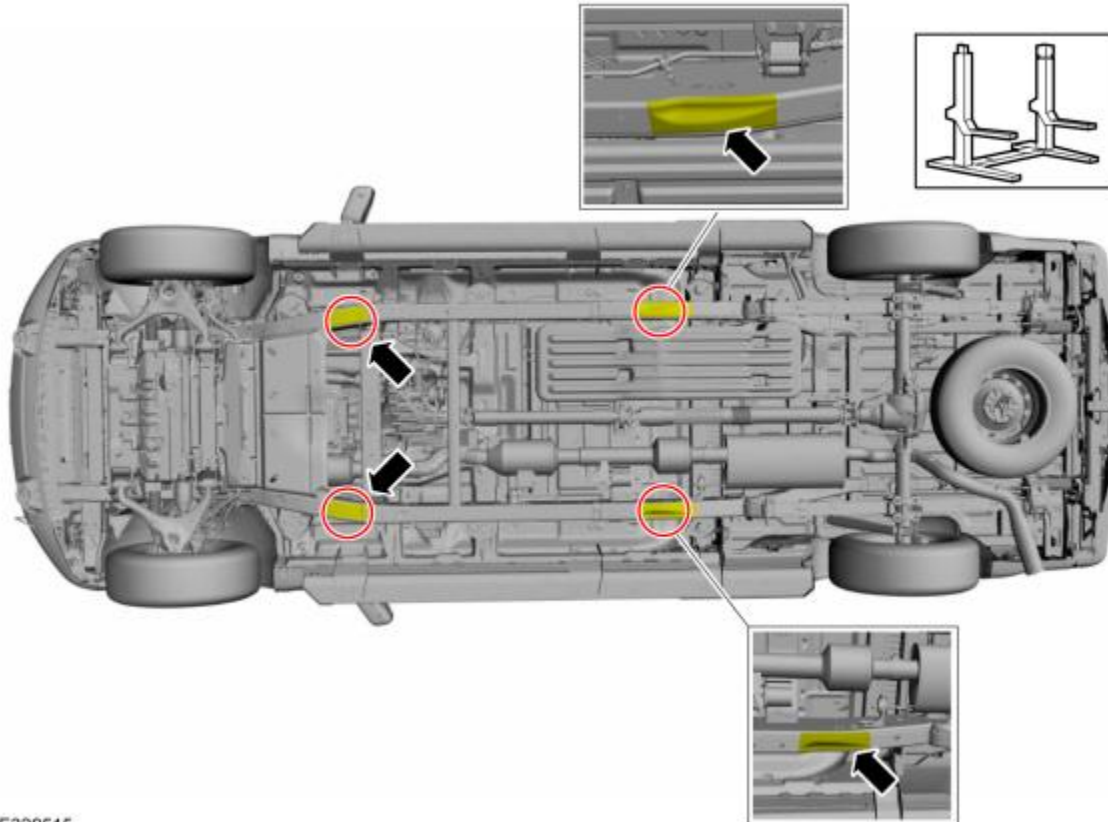

E329515

Refer to the picture above to find the appropriate jacking points : Note this works for all F150 vehicles, Hybrid, 2WD or 4WD.

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020


Front Shock Removal

NOTICE: Suspension fasteners are critical parts that affect the performance of vital components and systems. Failure of these fasteners may result in major service expense. Use the same or equivalent parts if replacement is necessary. Do not use a replacement part of lesser quality or substitute design. Tighten fasteners as specified.

Remove wheel and tire

NOTE: *The wheel speed sensor electrical connector is located in the engine compartment secured to the fender apron.*

Disconnect the wheel speed sensor electrical connector and detach the harness retainer.

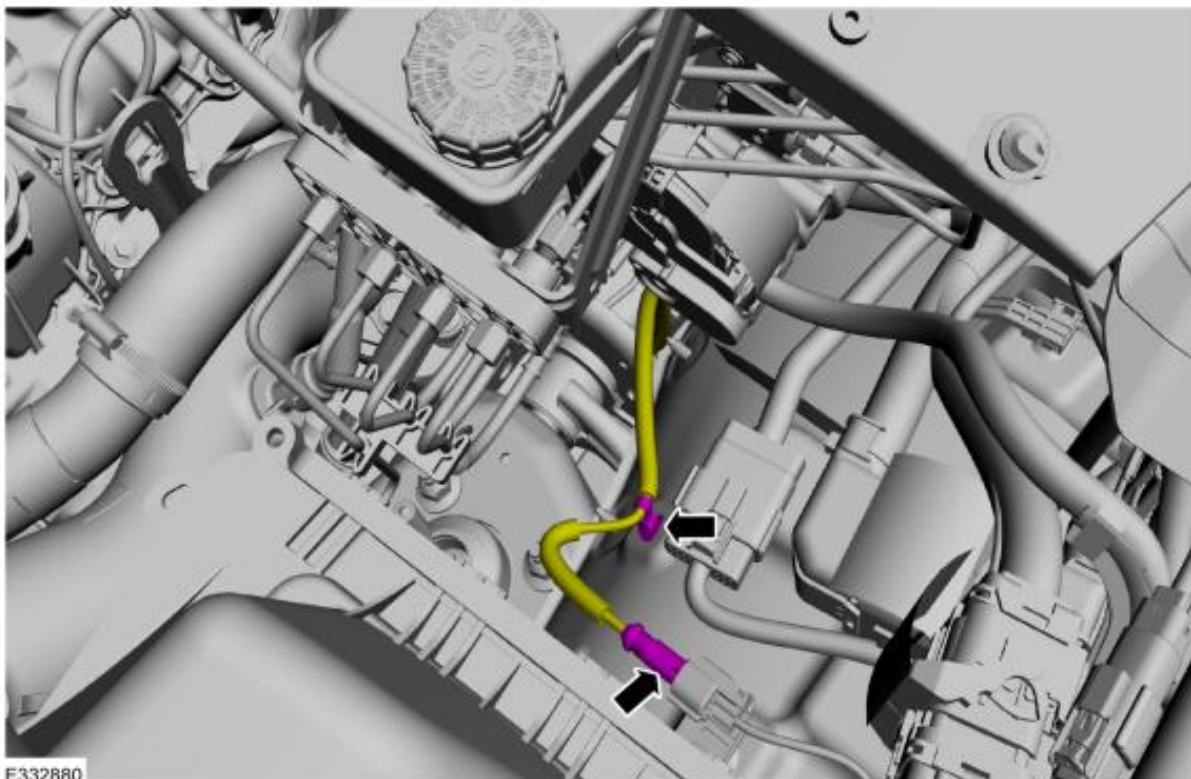


NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020

Remove the wheel speed sensor wire bracket bolt.

Unclip the wheel speed sensor wire from the brake hose.

Unclip the 2 wheel speed sensor wire retainers and position aside the wheel speed sensor wire.

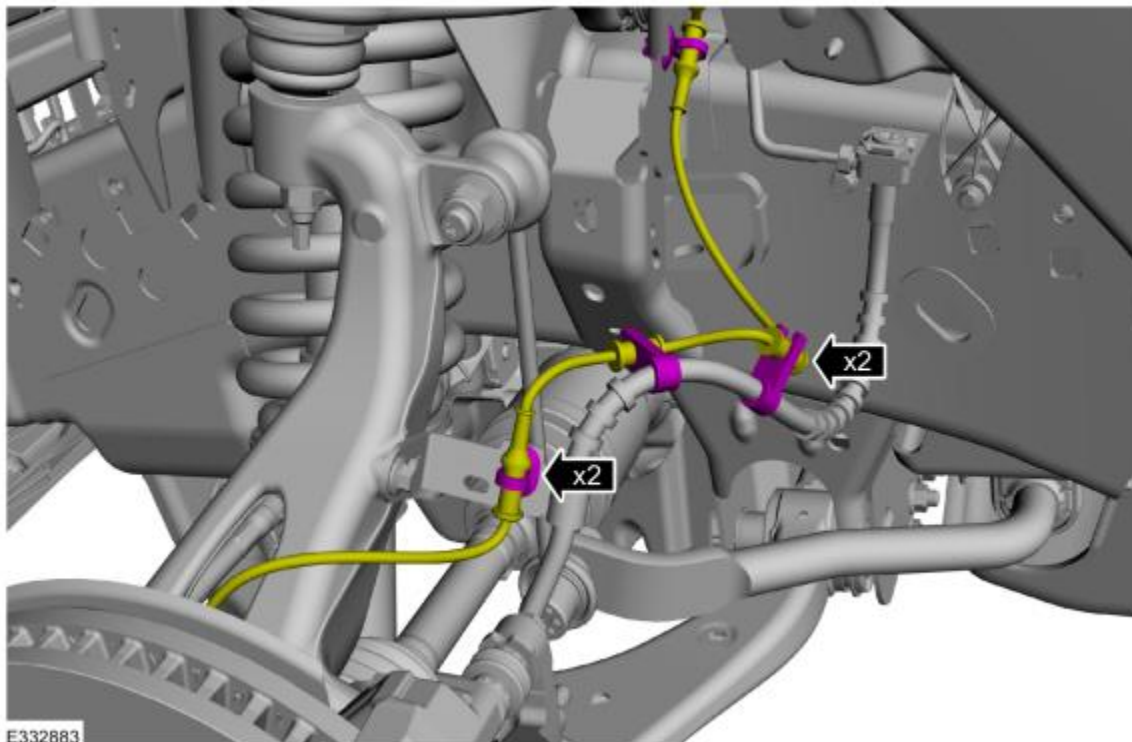




FORD PERFORMANCE

M-F150-W8
2021-23MY F-150 (4X4 Super Crew Cab)
Dark Trail Package


NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020

Remove the wheel hub nut dust cap.

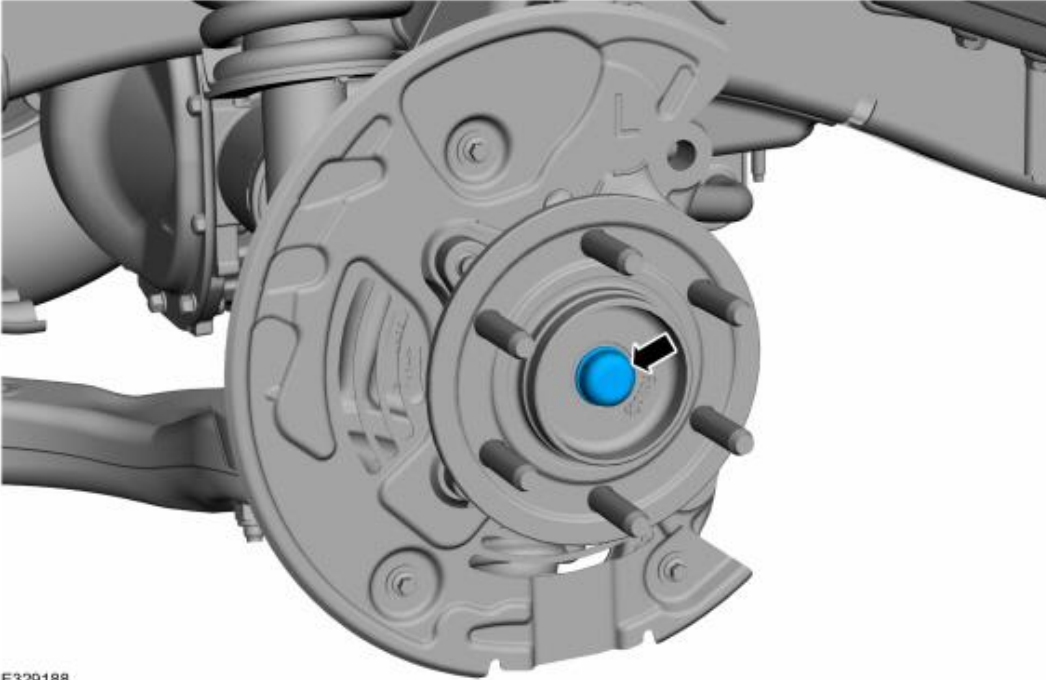

E329188

Remove and discard the wheel hub nut.

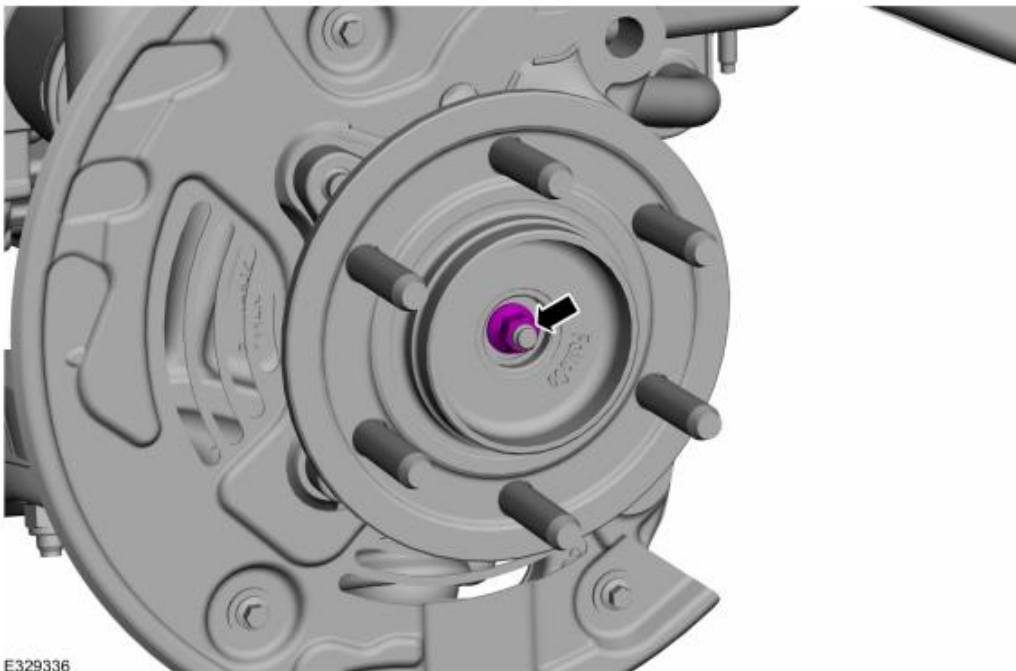

E329336


Ford Factory Shop Manual purchase options www.motorcraftservice.com

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020


NOTICE: Do not use a hammer to separate the outer tie-rod end from the wheel knuckle or damage to the wheel knuckle may result.

NOTICE: Use care when installing the tie rod separator or damage to the outer tie-rod end boot may occur.

Remove and discard the tie rod end nut and separate the tie rod end from the wheel knuckle.
Use Tie Rod End Remover

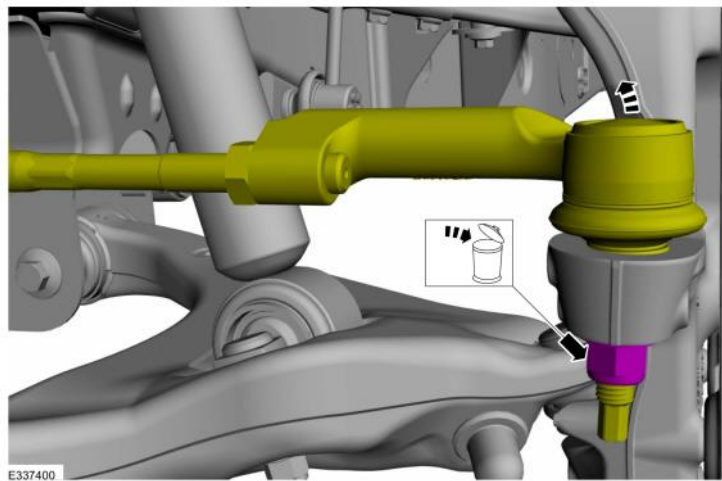


Remove the brake hose bracket bolt and position the brake hose bracket aside.

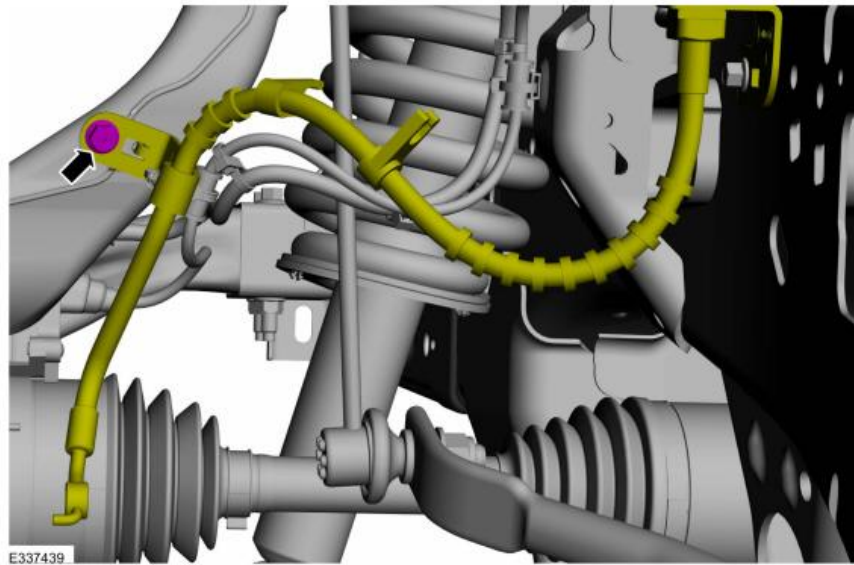


NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020

Loosen the upper ball joint nut. Do not remove completely.

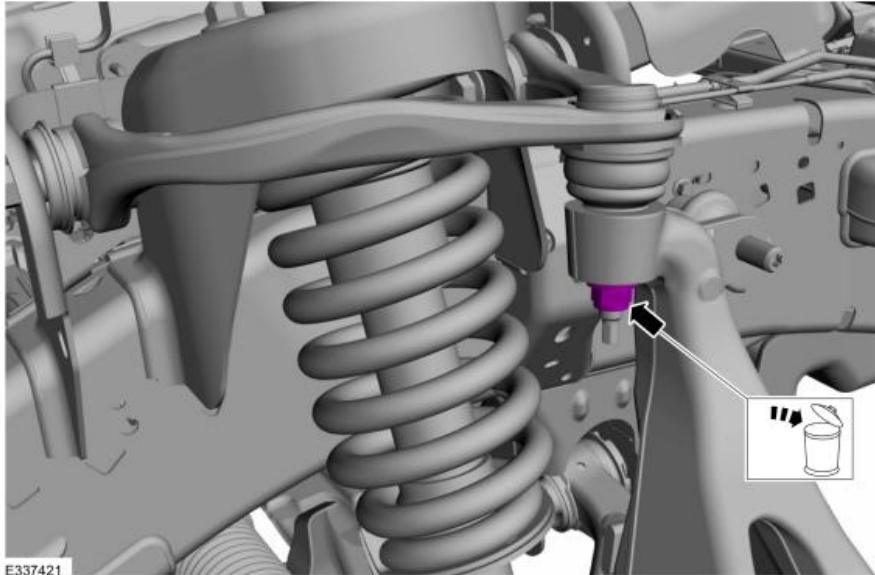

NOTE: *Be sure not to damage the ball joint boot when installing the Ball Joint Separator.*


Separate the upper ball joint from the wheel knuckle.

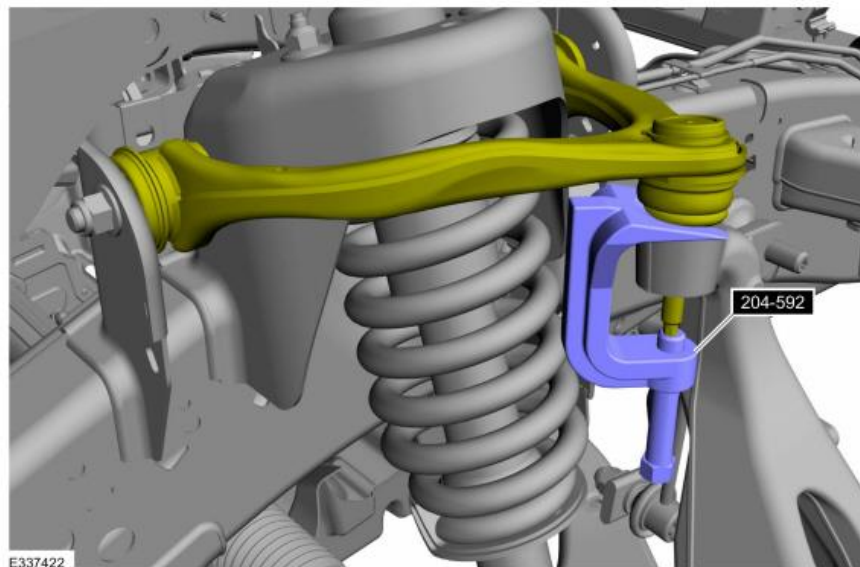


Ford Factory Shop Manual purchase options www.motorcraftservice.com

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020

Remove and discard the front stabilizer bar link upper nut.

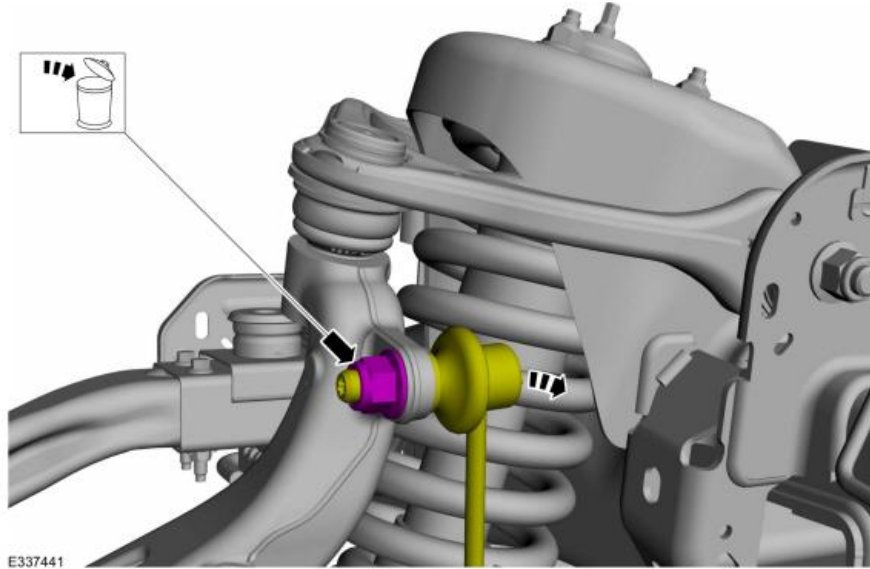


Remove and discard the 2 shock absorber and spring assembly lower nuts.

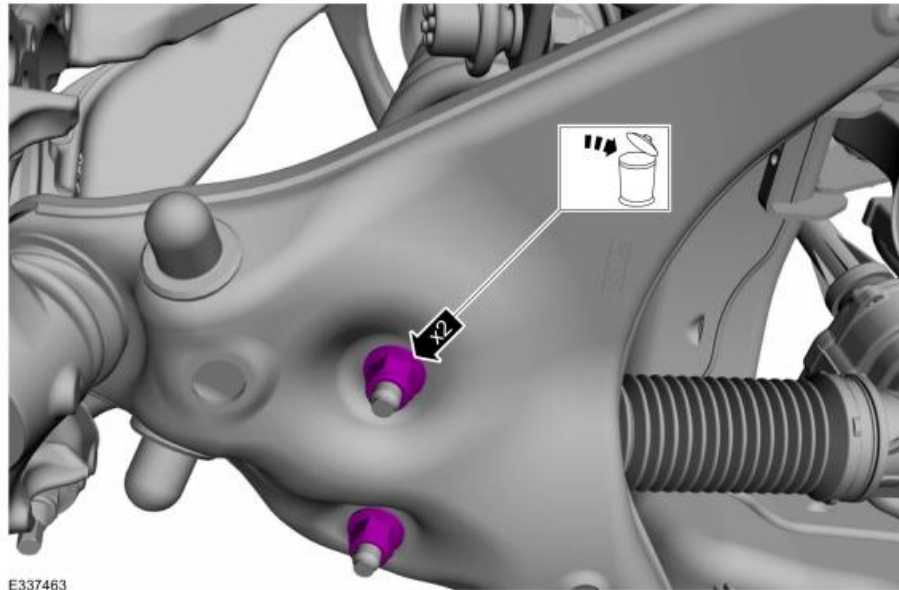

Ford Factory Shop Manual purchase options www.motorcraftservice.com

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020

Remove and discard the 3 shock absorber and spring assembly upper nuts.

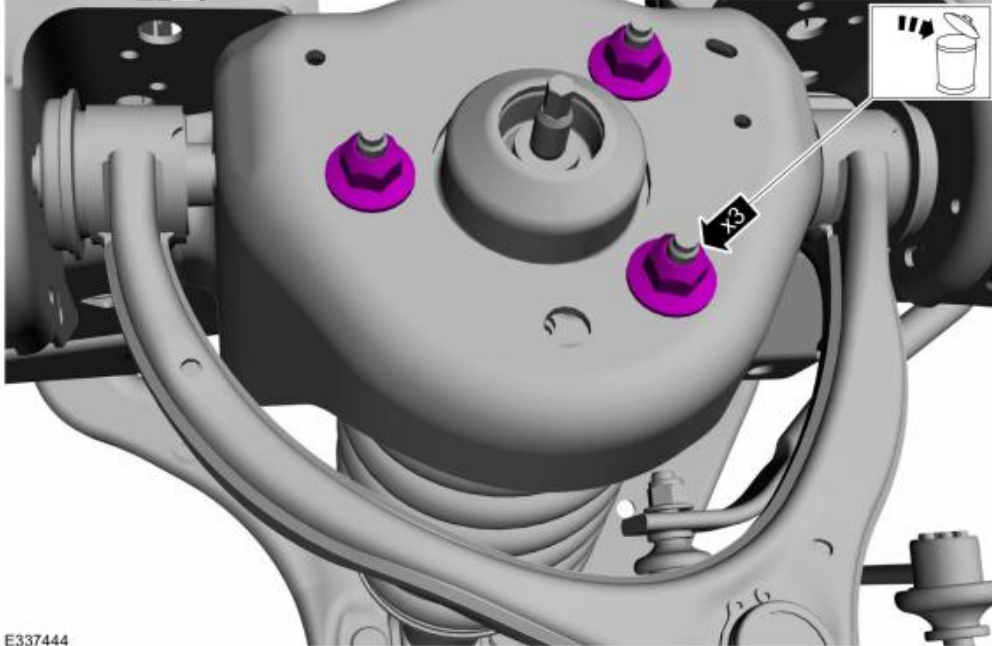


Prior to releasing the nut from the upper control arm ball joint completely, be sure to support the wheel knuckle so that it does not fall and cause damage. Disconnect upper control arm from the wheel knuckle.

Position the lower arm down to gain clearance for removing the shock absorber and spring assembly.

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020

Remove the shock absorber and spring assembly. (wheel knuckle removed for clarity)

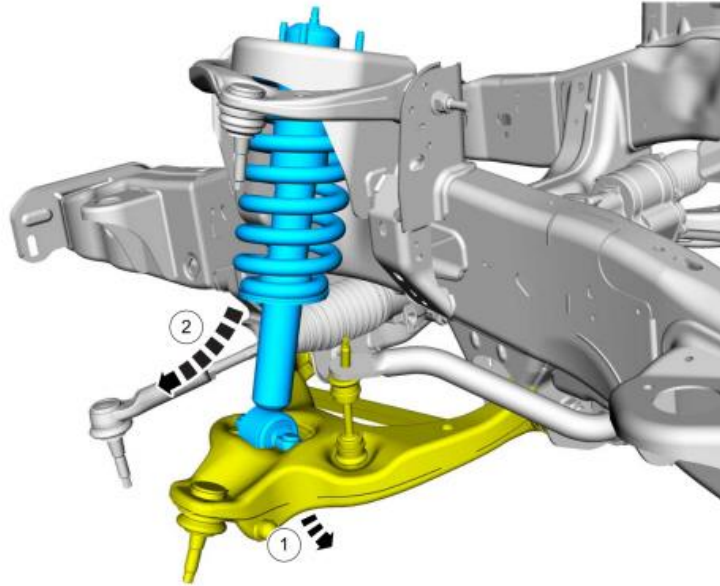


E190236

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020

Installation


Install the shock absorber and spring assembly. (wheel knuckle removed for clarity)

Position the lower arm up.

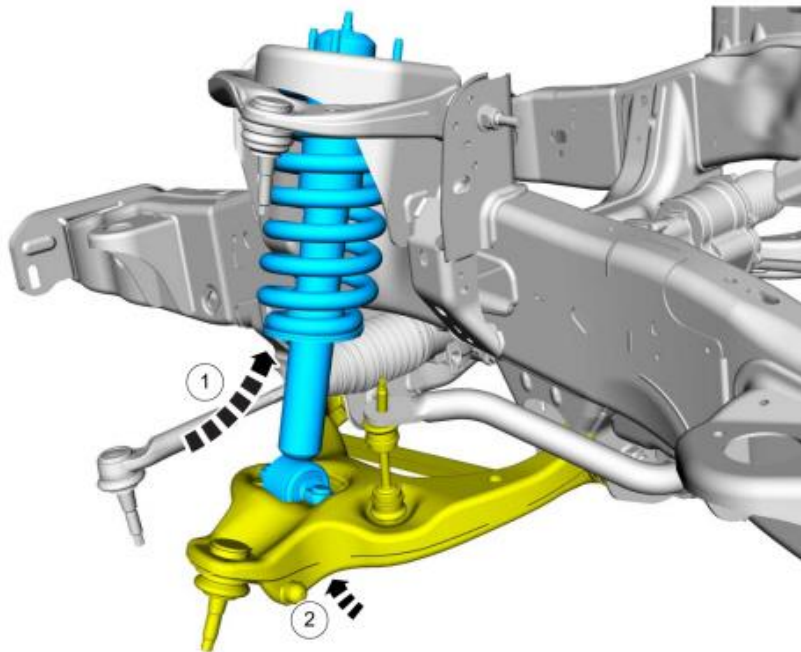

E190237

Install the 3 new shock absorber and spring assembly upper nuts.
Torque: 52 lb.ft (70 Nm)

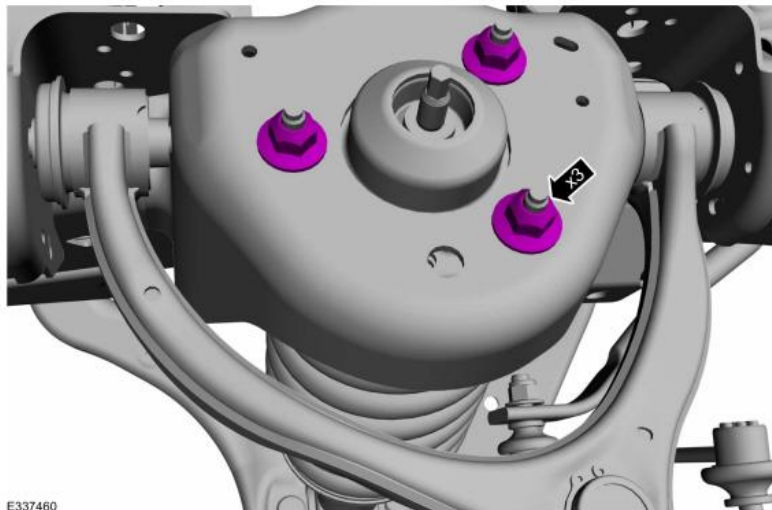

E337460

Ford Factory Shop Manual purchase options www.motorcraftservice.com




FORD PERFORMANCE

M-F150-W8
2021-23MY F-150 (4X4 Super Crew Cab)
Dark Trail Package

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020

Install the 2 new shock absorber and spring assembly lower nuts.
Torque: 66 lb.ft (90 Nm)

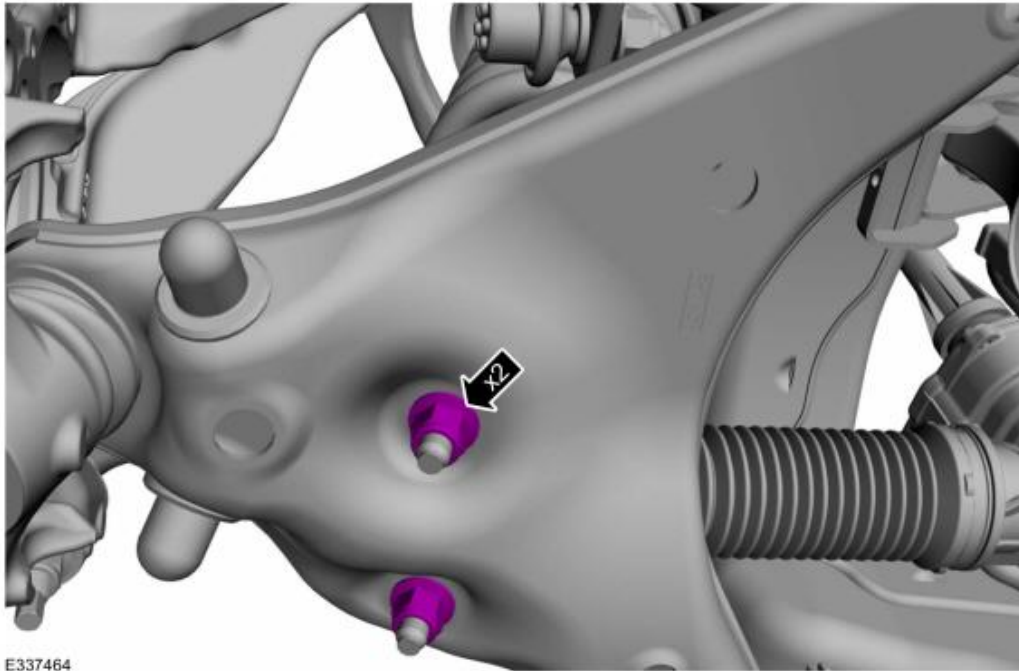


Ford Factory Shop Manual purchase options www.motorcraftservice.com


NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020

Install the new front stabilizer link upper nut. (wheel knuckle removed for clarity)
Torque: 111 lb.ft (150 Nm)

NOTE: Use the hex-holding feature to prevent the stud from turning while installing the nut.

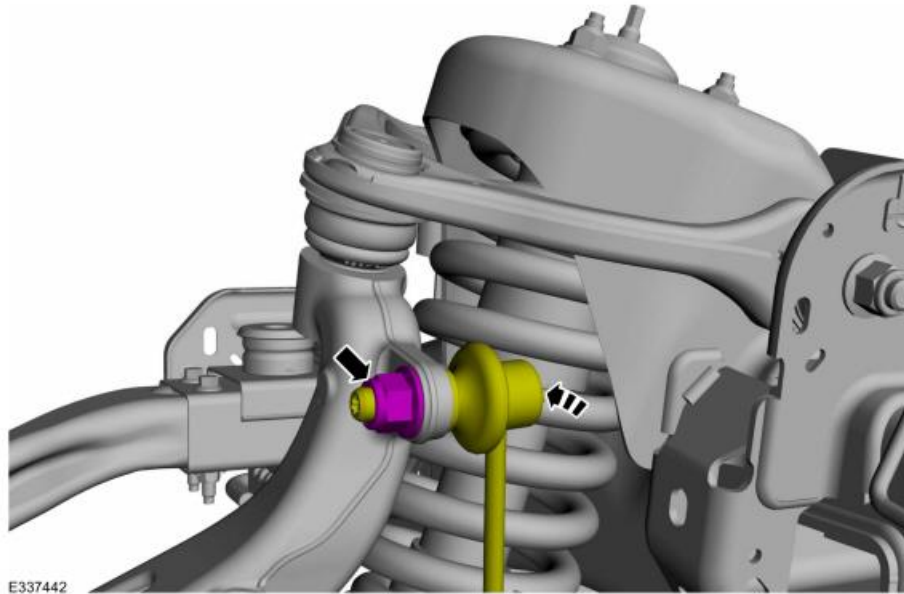


Install the new upper ball joint nut.
Torque: 46 lb.ft (63 Nm)

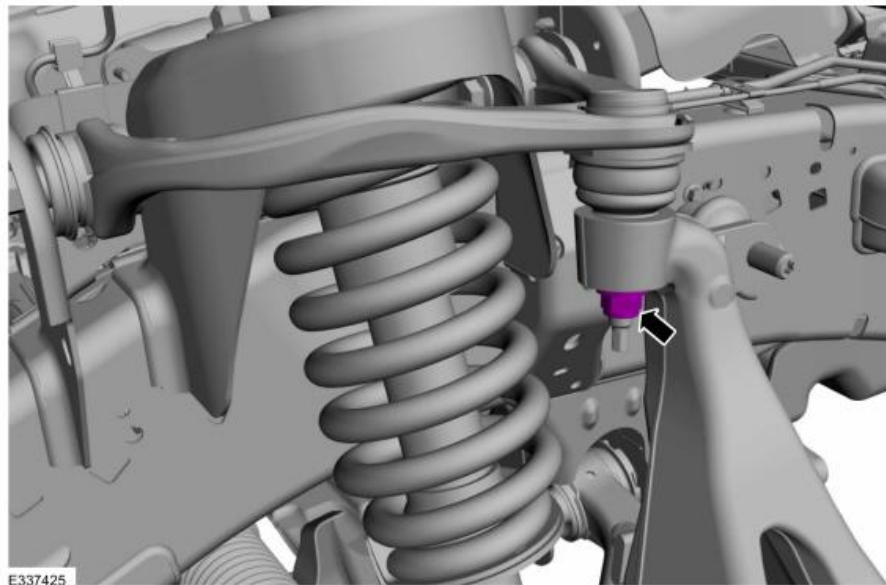


Ford Factory Shop Manual purchase options www.motorcraftservice.com

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020

Position the brake hose bracket and install the brake hose bracket bolt.
Torque: 22 lb.ft (30 Nm)

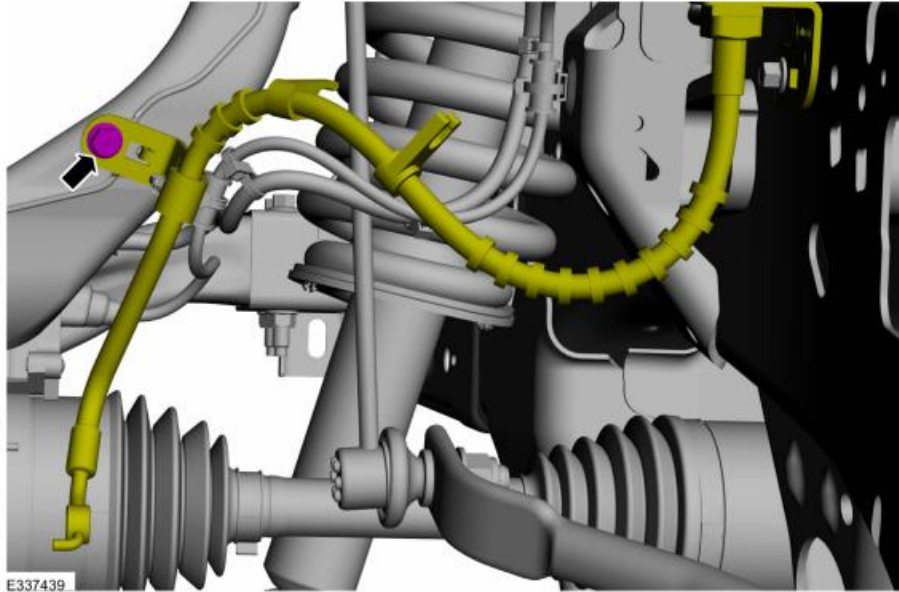


Position the tie rod end and install the new tie rod end nut.
Torque: 66 lb.ft (90 Nm)

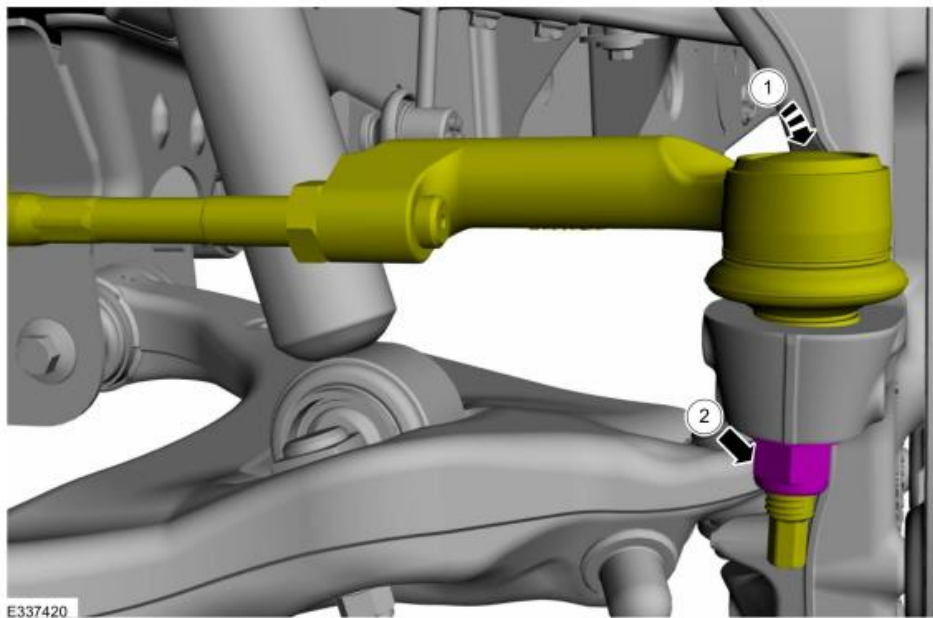

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020

NOTICE: Measure the depth of the CV shaft threaded end to the inner bearing race (shown in illustration). The minimum depth is 15.5 mm (0.61 in). If the depth is less than 15.5 mm (0.61 in) rotate the CV shaft to clear a binding condition between the IWE and CV splines. Installing the axle nut and tightening without the proper depth of protrusion will result in damage to the IWE.

Measure the CV shaft threaded end to the inner bearing race.

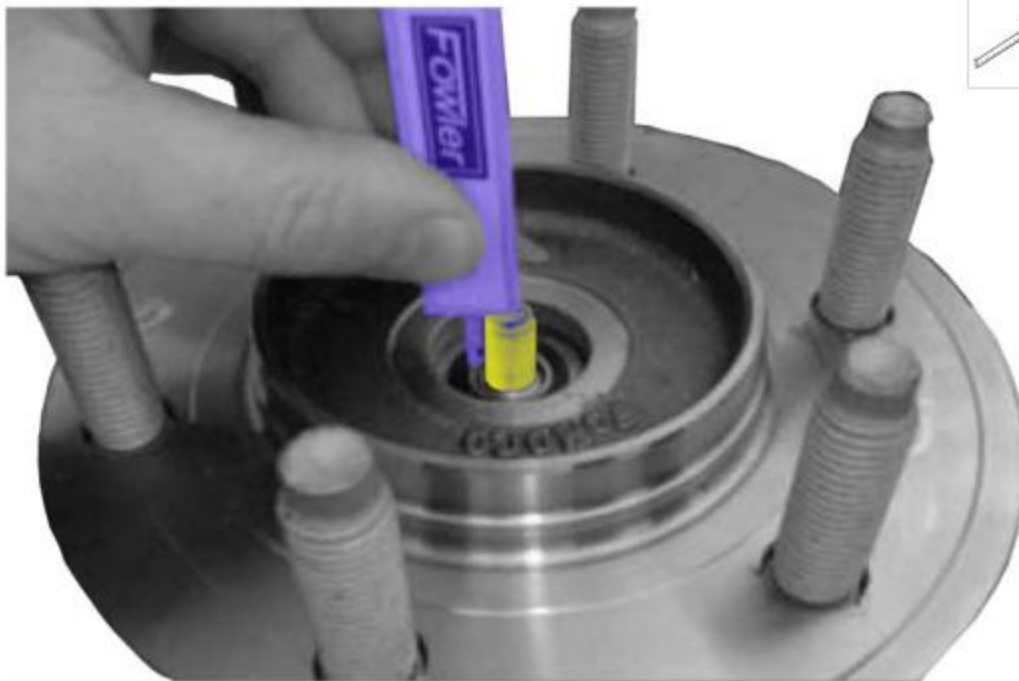


E190195

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020

NOTICE: Verify the spline engagement by checking for spline lash before installing the wheel hub nut or component damage may occur.

Install the new the axle nut.
Torque: 30 lb.ft (40 Nm)


Verify free rotation of the hub with no CV joint rotation. No clicking or grinding noise should be present.

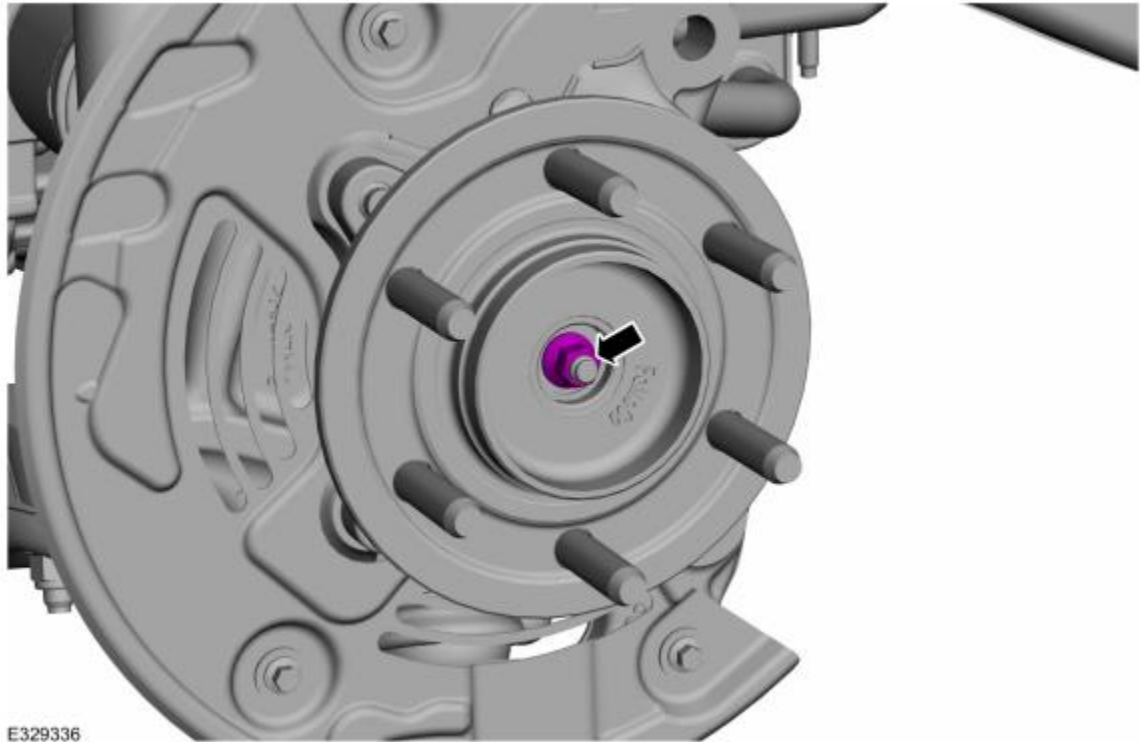

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF
FORD PERFORMANCE PARTS © Ford Motor Company 2020

NOTE: *If the dust cap to bearing interface is damaged, damaged parts must be replaced.*

Install the dust cap.

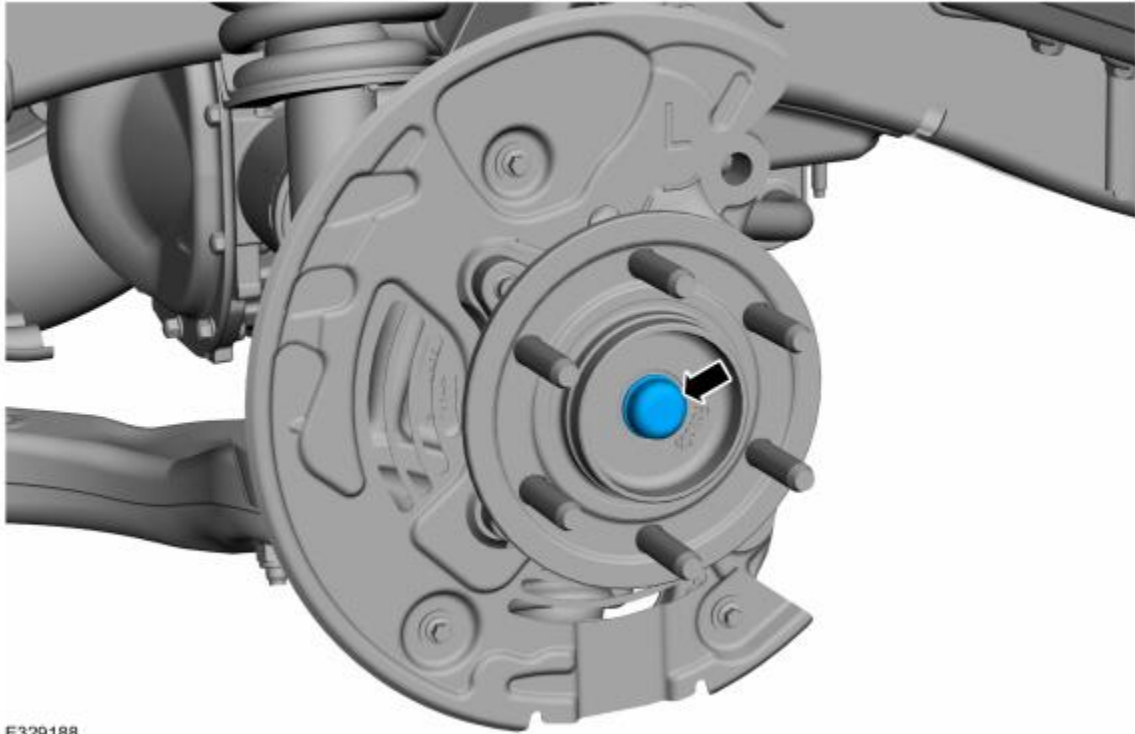

E329188


NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020

Position the wheel speed sensor wire and clip the 2 wheel speed sensor wire retainers.

Clip the wheel speed sensor wire to the brake hose.

Install the wheel speed sensor wire bracket bolt.


Torque: 106 lb.in (12 Nm)

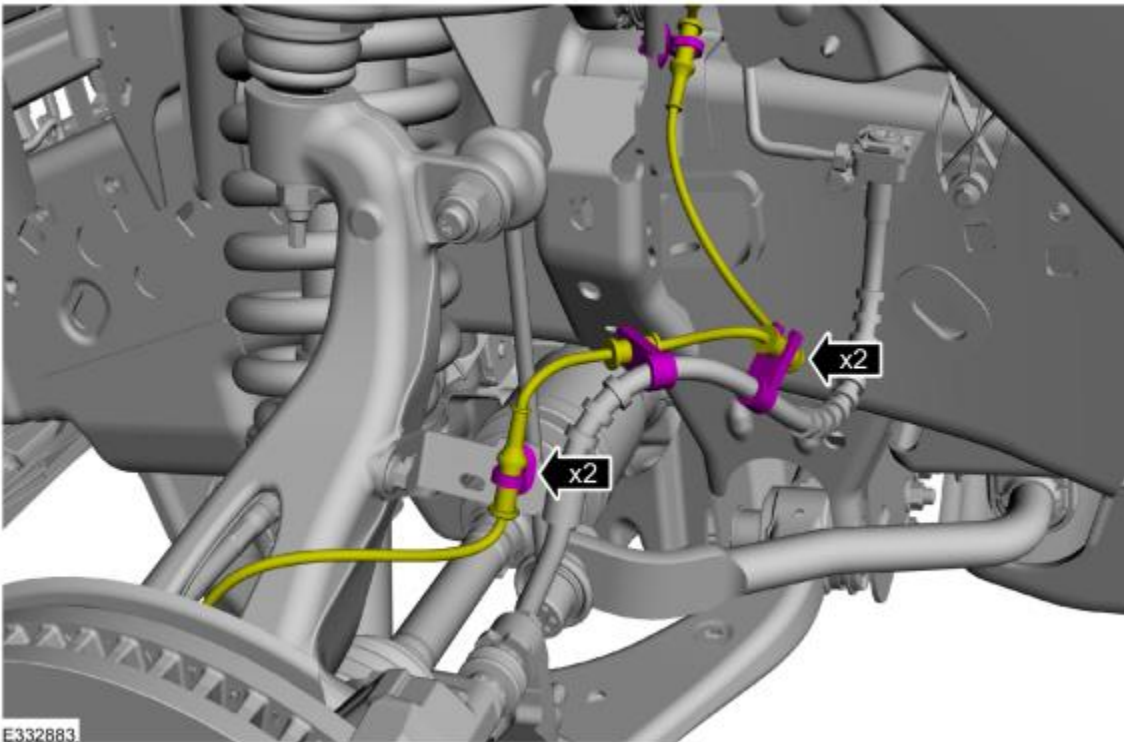

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF
FORD PERFORMANCE PARTS © Ford Motor Company 2020

NOTE: *The wheel speed sensor electrical connector is located in the engine compartment secured to the fender apron.*

Connect the wheel speed sensor electrical connector.

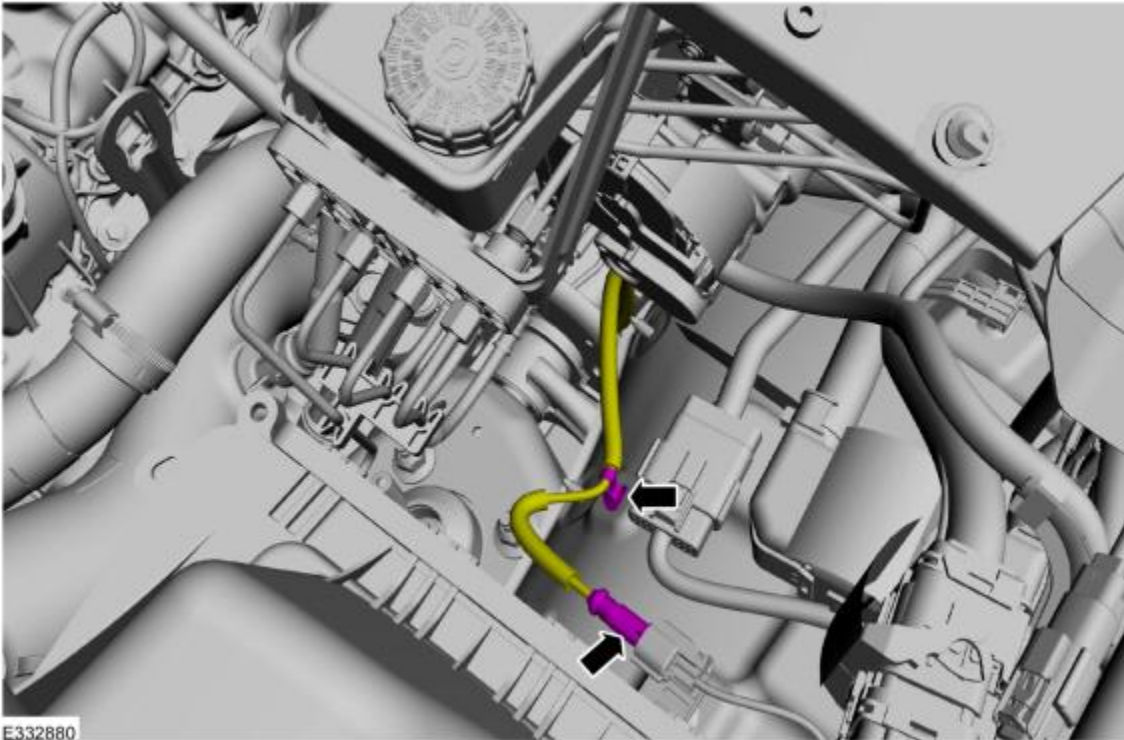



FORD PERFORMANCE

M-F150-W8
2021-23MY F-150 (4X4 Super Crew Cab)
Dark Trail Package

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF
FORD PERFORMANCE PARTS © Ford Motor Company 2020

Rear Shock Absorber Removal

⚠ WARNING: Do not apply heat or flame to the shock absorber or strut tube. The shock absorber and strut tube are gas pressurized and could explode if heated. Failure to follow this instruction may result in serious personal injury.

⚠ WARNING: Keep all body parts clear of shock absorbers or strut rods. Shock absorbers or struts can extend unassisted. Failure to follow this instruction may result in serious personal injury.


NOTICE: Suspension fasteners are critical parts that affect the performance of vital components and systems. Failure of these fasteners may result in major service expense. Use the same or equivalent parts if replacement is necessary. Do not use a replacement part of lesser quality or substitute design. Tighten fasteners as specified.

NOTE: *Removal steps in this procedure may contain installation details.*

Ford Factory Shop Manual purchase options www.motorcraftservice.com

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020


Support the rear axle assembly.

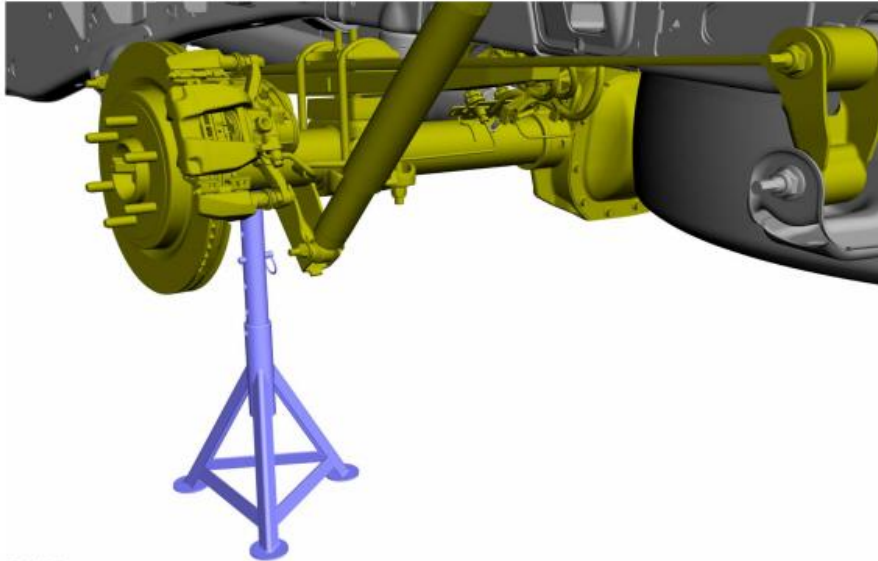

E338155

Remove and discard the rear shock absorber upper and lower bolts and nuts.
Torque: 66 lb.ft (90 Nm)

Remove the rear shock absorber.

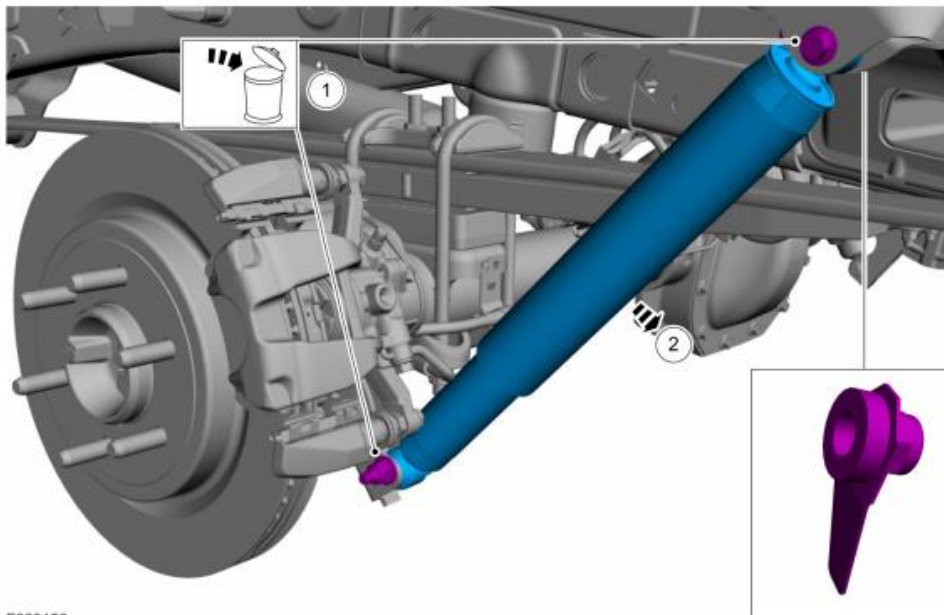

E338156

Ford Factory Shop Manual purchase options www.motorcraftservice.com



M-F150-W8
2021-23MY F-150 (4X4 Super Crew Cab)
Dark Trail Package

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020

Attach the remote reservoirs to both rear shock absorbers as pictured using the included brackets and fastener. Reservoir should be mounted rearward of the shock absorber.



Ford Factory Shop Manual purchase options www.motorcraftservice.com

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020

Install the rear shock absorber. The remote reservoir on the shock absorber should be oriented toward the rear of the vehicle.



Install the new rear shock absorber upper and lower bolts and nuts.
Torque: 66 lb.ft (90 Nm)

NOTE: *Make sure that new components are installed.*

NOTE: *A J-nut is used on the upper LH side only.*

Torque the wheel lug nuts (if removed) to 150 lb.ft (204 Nm), recheck torque after 100mi (160km).



M-F150-W8
2021-23MY F-150 (4X4 Super Crew Cab)
Dark Trail Package

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF
FORD PERFORMANCE PARTS © Ford Motor Company 2020

TPMS, Tire, and Wheel Installation

Special Tool(s) / General Equipment

Wooden Block

NOTICE: Ford Recommends The Following For Vehicles With Carbon Fiber And Alloy Wheels:

- **Tire Changer:**
 - Ford requires center clamp style tire changers such as Hunter® Auto 34, Revolution, TC3900 or equivalent. Anything else, especially table top style machines, are highly likely to damage the wheel which is not warrantable. Do not use table top design machines that grab onto the inside of the wheel and that ride on the front wheel flange to remove the tire. Wheel damage will occur.
- **Tire Balancer:**
 - Ford requires the use of wheel balancers that do not contact the wheel face such as, Hunter® Road Force Touch GSP9700. Do not use machines that contact the wheel face. Wheel damage will occur.

NOTICE: Failure to follow the instructions below may result in damage to the TPMS .

NOTICE: The TPMS sensor is mounted to the valve stem. Removal of the valve stem requires dismounting the tire from the wheel and removal of the TPMS sensor.

NOTE: Use only the Digital Tire Pressure Gauge any time tire pressures are measured to be sure that accurate values are obtained.


Ford Factory Shop Manual purchase options www.motorcraftservice.com

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020

Removal

1. With the vehicle in NEUTRAL, position it on a hoist.
Refer to: Jacking and Lifting - Overview (100-02 Jacking and Lifting, Description and Operation).
2. **NOTE:** *If equipped.*

Remove the center cap.

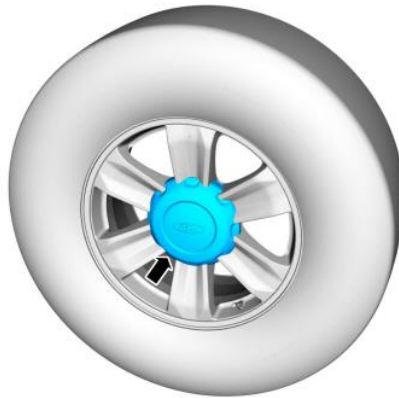


E190249

3. **NOTICE:** Do not use heat to loosen a seized wheel nut or damage to the wheel and wheel bearing can occur.

NOTICE: If equipped with full wheel cover with exposed wheel nuts, the wheel nuts must be removed prior to removing the wheel cover or damage to the wheel cover will occur.

NOTE: Use metric hexagonal socket.

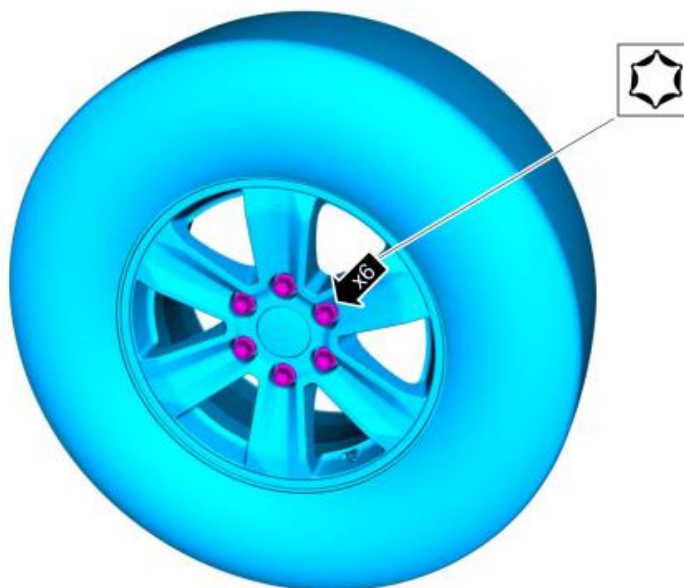

E190250

Ford Factory Shop Manual purchase options www.motorcraftservice.com

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020

4. **NOTICE:** The valve stem is connected to the TPMS sensor. Do not pull the valve stem from the wheel, or damage to the sensor will occur.

NOTE: If a new TPMS sensor is being installed, remove and discard the valve stem-to-sensor screw and the sensor.

Remove the valve stem core and fully deflate all air from the tire.


5. **NOTICE:** Do not allow the tire beads to move beyond the wheel mid-plane (middle of the wheel) when separating the beads from the wheels, damage to the TPMS sensor may occur.

NOTICE: Tire and valve stem position is critical to prevent damage to the TPMS sensor when using a paddle-type bead separator.

NOTE: Some machines may have a nylon roller bead separator at the 12 o'clock position instead of the paddle-type bead separator at the 3 o'clock position.

- For a paddle-type tire machine, position the valve stem at the 12 o'clock or 6 o'clock position and the paddle at the 3 o'clock position.
- For a roller-type tire machine, align the valve stem with the roller at any position.

NOTE: Paddle type shown, roller type similar.

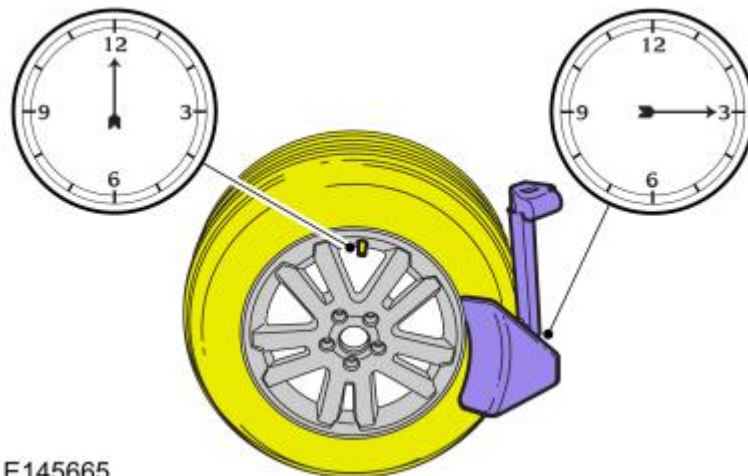




FORD PERFORMANCE

M-F150-W8
2021-23MY F-150 (4X4 Super Crew Cab)
Dark Trail Package

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020

6. **NOTE:** *Index-mark the valve stem and wheel weight positions on the tire.*

Place the wheel and tire assembly on the turntable of the tire machine with the valve stem at the 11:30 position and the machine arm at the 12 o'clock position and dismount the outer bead from the wheel.

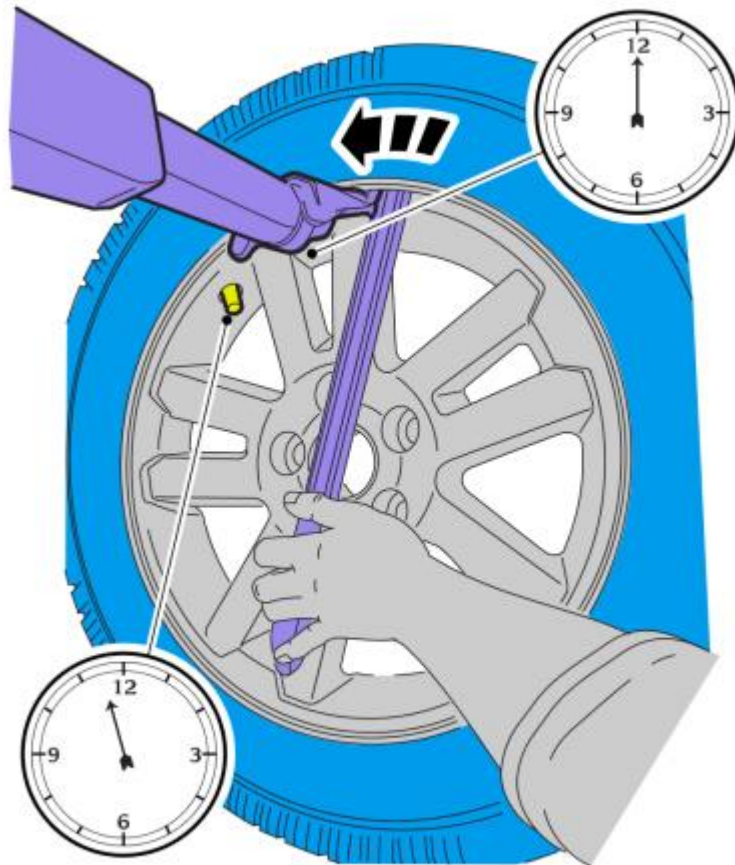

E145667


7. Reset the wheel and tire assembly on the turntable of the tire machine with the valve stem at the 11:30 position and the machine arm at the 12 o'clock position and dismount the inner bead from the wheel.

Ford Factory Shop Manual purchase options www.motorcraftservice.com

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020


8. **NOTE:** *A new valve stem must be installed whenever a new tire or wheel is installed.*

1. Remove and discard the TPMS sensor-to-valve stem screw.
2. Separate the TPMS sensor from the valve stem.

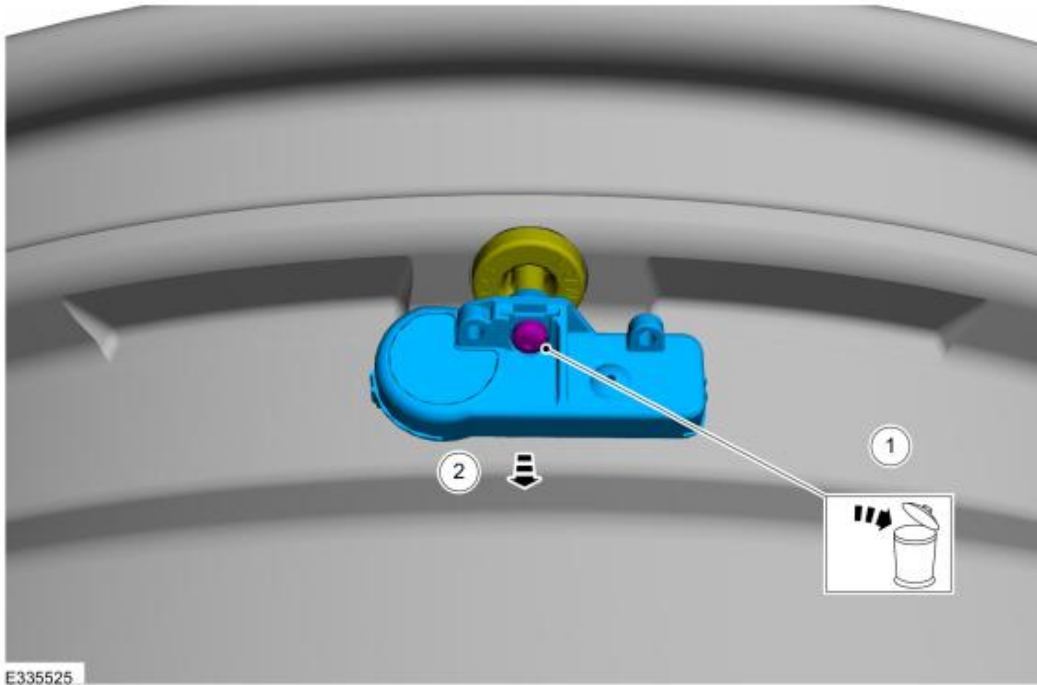

9. **NOTICE:** Use care not to damage the wheel surface when removing the valve stem.

Using a suitable valve stem remover/installer, remove and discard the valve stem.
Use the General Equipment: Wooden Block

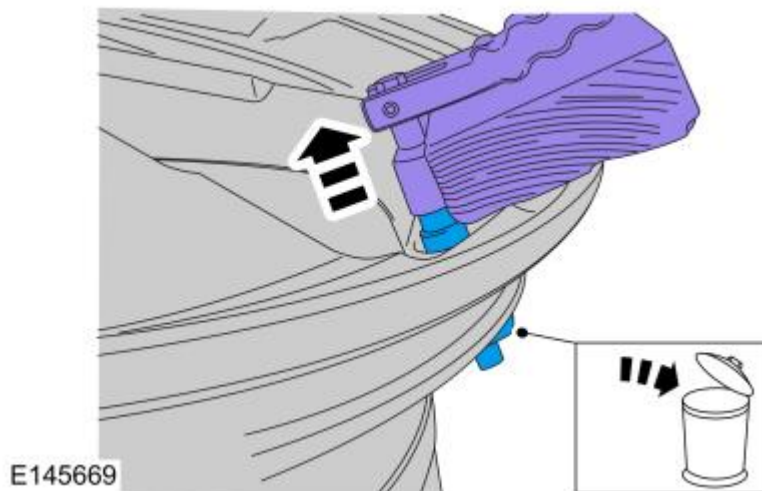

Ford Factory Shop Manual purchase options www.motorcraftservice.com



FORD PERFORMANCE

M-F150-W8
2021-23MY F-150 (4X4 Super Crew Cab)
Dark Trail Package

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020


NOTE: *When installing a new wheel, always install a new valve stem and sensor screw. Reuse the TPMS sensor from the previous wheel if possible. The TPMS will not have to be trained if the sensor is reused.*

NOTE: *If the TPMS sensor is being reused, inspect the TPMS sensor for damage and install a new sensor as necessary.*

10. NOTICE: **To prevent TPMS sensor and valve stem damage, the valve stem must be installed onto the TPMS sensor and then installed into the wheel as an assembly.**

Position the new valve stem onto the TPMS sensor and install the new screw.

Torque: 13 lb.in (1.5 Nm)

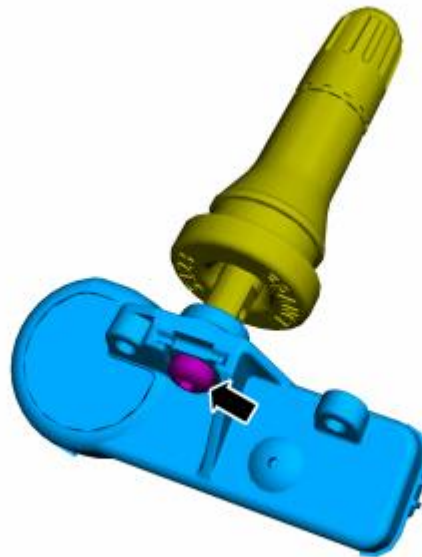

E335526

Ford Factory Shop Manual purchase options www.motorcraftservice.com

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020

Installation

NOTICE: Damage to the TPMS sensor may result if the tire mounting is not carried out as instructed.


1. **NOTICE:** It is important to pull the valve stem and TPMS sensor assembly through the wheel rim hole in a direction parallel to the valve stem hole axis. If the assembly is pulled through at an angle, damage to the valve stem and sensor assembly may occur.

NOTICE: Use care not to damage the wheel surface when installing the valve stem and TPMS sensor assembly.

NOTE: Lubricate the valve stem with soapy water and install the valve stem and TPMS sensor assembly into the wheel using a block of wood and a suitable valve stem installer.

Using a suitable valve stem installer, install the new valve stem and TPMS sensor assembly.

Use the General Equipment: Wooden Block

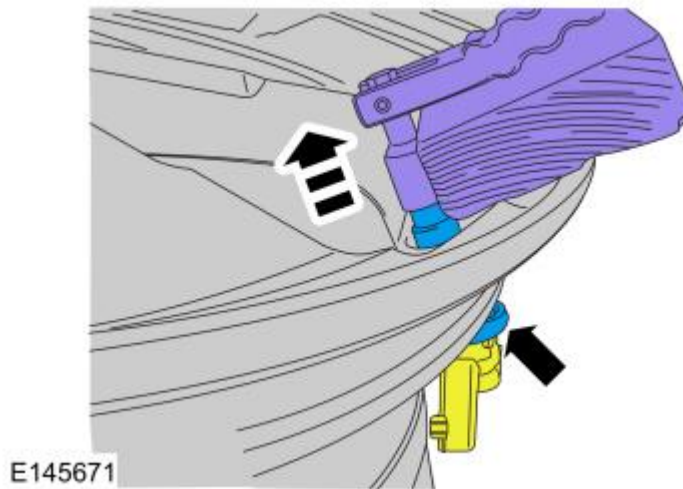


2. **NOTE:** Lubricate the tire beads using a suitable fast-drying, corrosion-inhibiting tire bead lubricant.

NOTE: Do not mount the tire at this time.

Position the wheel on the turntable of the tire machine, then lubricate and position the bottom bead of the tire on the wheel.

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020

3. Position the wheel to align the valve stem with the machine arm, at the 6 o'clock position and mount the bottom bead of the tire.

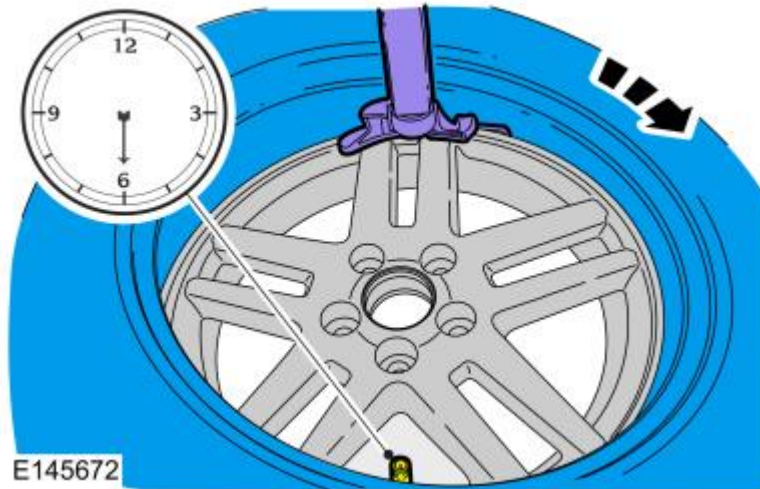

4. Reposition the wheel to align the valve stem with the machine arm at the 6 o'clock position and mount the top bead of the tire.
5. **NOTE:** Use only the Digital Tire Pressure Gauge any time tire pressures are measured to be sure that accurate values are obtained.

Inflate the tire to the pressure specified on the VC label located on the driver door or door pillar.

NOTE: Proceed to the next step if the tire beads do not seat at the specified inflation pressure.


6. **⚠ WARNING:** If there is a need to exceed the maximum pressure indicated on the sidewall of the tire in order to seat the beads, follow all steps listed below. Failure to follow these steps may result in serious personal injury.

NOTICE: The following steps should only be carried out if the tire beads cannot be seated by inflating the tire up to the maximum inflation pressure listed on the tire sidewall.

7. Relubricate the tire bead and wheel bead seat area.
8. Install a remote valve and pressure gauge.
9. Wear eye and ear protection and stand at a minimum of 3.65 m (12 ft) away from the wheel and tire assembly.
10. Inflate the tire using the remote valve and tire gauge until the beads have seated or until the pressure gauge is 138 kPa (20 psi) more than maximum inflation pressure on tire sidewall. If beads have not seated, deflate the tire and proceed to the next step.
11. Place the wheel and tire assembly in an OSHA-approved tire safety cage.

Ford Factory Shop Manual purchase options www.motorcraftservice.com


NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020

12. Inflate the tire using the remote valve and pressure gauge until the beads have seated or until the pressure gauge is 276 kPa (40 psi) more than maximum inflation pressure on the tire sidewall. **Do not exceed 276 kPa (40 psi) above the maximum pressure on tire sidewall. Install a new tire if the beads do not seat at this pressure.**
13.  **WARNING:** When a wheel is installed, always remove any corrosion, dirt or foreign material present on the mounting surface of the wheel and the mounting surface of the wheel hub, brake drum or brake disc. Make sure that any fasteners that attach the rotor to the hub are secured so they do not interfere with the mounting surfaces of the wheel. Failure to follow these instructions when installing wheels may result in the wheel nuts loosening and the wheel coming off while the vehicle is in motion, which could result in loss of control, leading to serious injury or death to vehicle occupant(s).

NOTICE: Make sure to apply a thin coat of anti-seize lubrication only to the interface between the wheel pilot bore and the hub pilot. Do not allow the anti-seize to make contact with the wheel-to-brake disc/drum mounting surface, wheel studs, wheel nuts, brake pads or brake disc friction surfaces or damage to components may occur.

Clean the mounting surfaces. Apply anti-seize lubrication.

Material: Motorcraft® High Temperature Nickel Anti-Seize Lubricant / XL-2

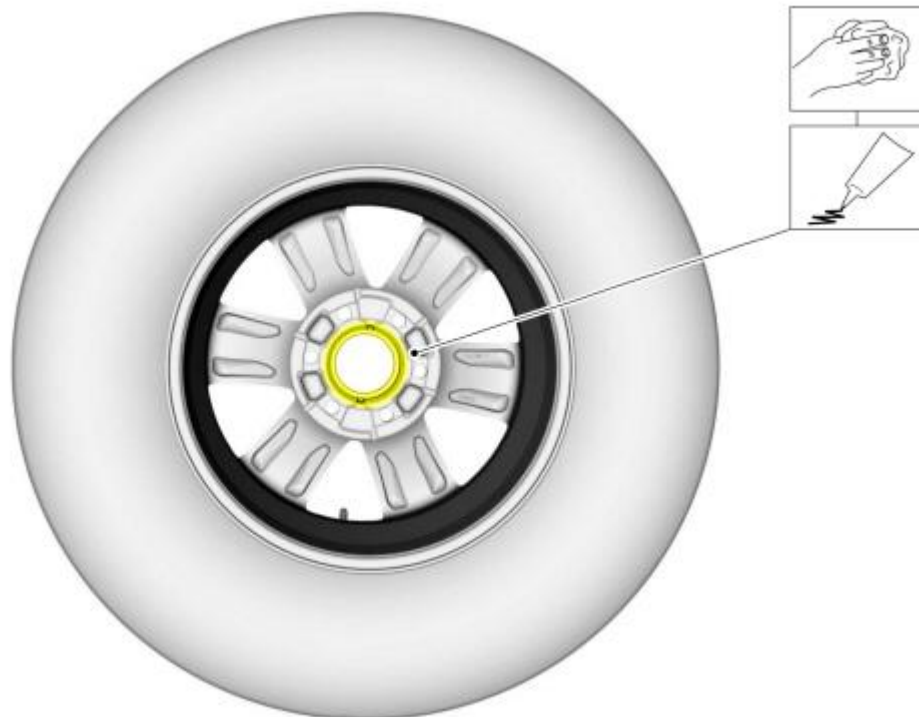

E190251

Ford Factory Shop Manual purchase options www.motorcraftservice.com




M-F150-W8
2021-23MY F-150 (4X4 Super Crew Cab)
Dark Trail Package

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF
FORD PERFORMANCE PARTS © Ford Motor Company 2020

14. **NOTE:** *Only tighten the nuts finger tight at this stage.*


Install the wheel and tire and install the wheel nuts.

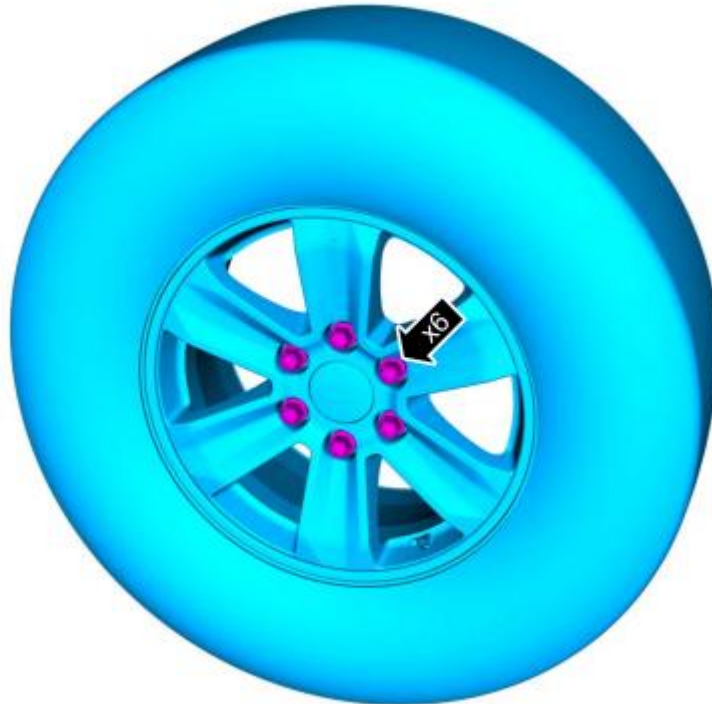

E250927

Ford Factory Shop Manual purchase options www.motorcraftservice.com

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020

15.  **WARNING: Retighten wheel nuts within 160 km (100 mi) after a wheel is reinstalled. Wheels can loosen after initial tightening. Failure to follow this instruction may result in serious injury to vehicle occupant(s).**

NOTICE: Failure to tighten the wheel nuts in a star/cross pattern can result in high brake disc runout, which accelerates the development of brake roughness, shudder and vibration.


NOTE: The wheel nut torque specification is for clean, dry wheel stud and wheel nut threads.

NOTE: Use metric hexagonal socket.

NOTE: Final tightening to be performed with vehicle resting on tires.

Tighten the wheel nuts.

Torque: 150 lb.ft (204 Nm)

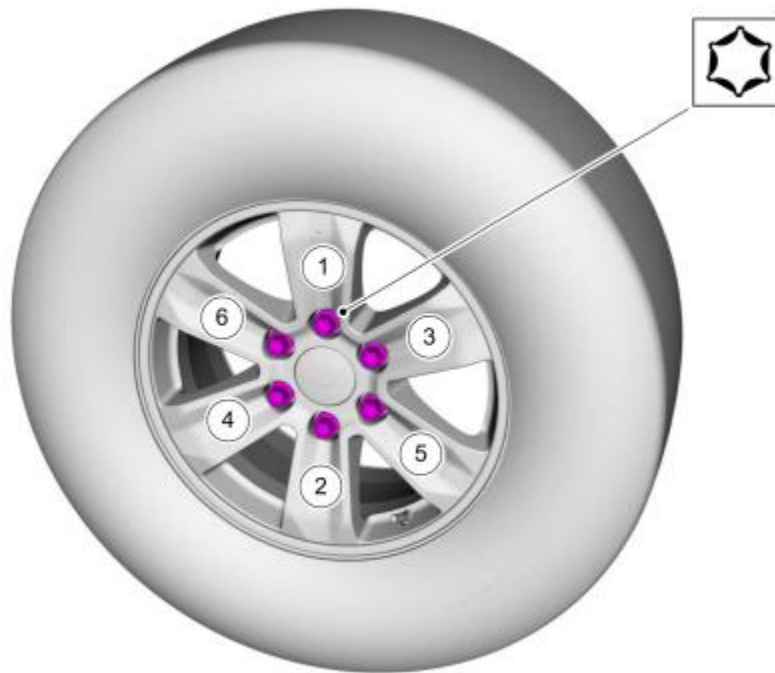


E190252

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF
FORD PERFORMANCE PARTS © Ford Motor Company 2020

16. **NOTE:** *If equipped.*

Install the center cap.

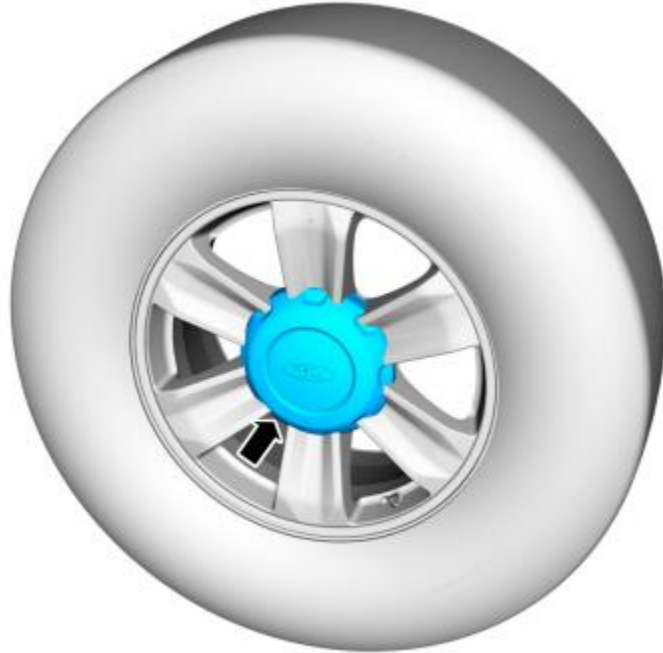


E190249

Check alignment, adjust as necessary.

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF
FORD PERFORMANCE PARTS © Ford Motor Company 2020

Tire Pressure Monitoring System (TPMS) Sensor Activation

Special Tool(s) / General Equipment

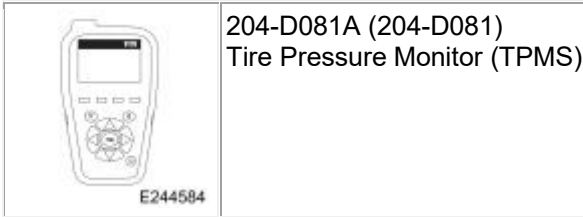

Activation

1. **NOTE:** *The tire pressure sensors will go into a sleep mode when the vehicle is stationary to conserve battery power. The sensors transmit information infrequently while in sleep mode. It is necessary to wake them up to transmit the latest tire pressure information.*

NOTE: *The tire pressure data in the BCM can be cleared when the module performs a reset. When this occurs, the air pressure DIDs are reset to the factory default of 1033 kPa (149.96 psi) and the cluster displays dashes. Drive your vehicle for at least 2 minutes over 32 km/h (20 mph) or until the tire pressures are displayed. Alternatively follow the procedure below:*

NOTE: *Position the vehicle 1m away from other vehicles to prevent interference from other vehicle tire pressure sensors.*

Turn the ignition switch to the ON position.

2. Position the special tool against the LF tire sidewall at the tire valve stem.
Use Special Service Tool: 204-D081A (204-D081) Tire Pressure Monitor (TPMS).
3. **NOTE:** *The special service tool should provide feedback in the form of a beep for each successful response from a tire pressure sensor. This feedback confirms that the tire sensor has responded, but does not confirm that the vehicle receiver module has heard the response.*

NOTE: *If the receiver module has not heard the sensor response, move the vehicle to rotate the wheels at least one-fourth of a turn and attempt to activate the sensor again. If the sensor is still not heard, attempt to activate again with the vehicle doors open.*

Press the test button on the special tool to activate the sensor.

Use Special Service Tool: 204-D081A (204-D081) Tire Pressure Monitor (TPMS).

4. Repeat Steps 2 and 3 for the remaining tires. The normal sequence is LF (as above) followed by RF, RR and LR.
5. **NOTE:** *The TPMS sensor cannot be installed without disassembly of the wheel and tire.*

Ford Factory Shop Manual purchase options www.motorcraftservice.com

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020

If a tire pressure sensor does not respond to the service tool when positioned against the tire sidewall at the valve stem, repeat the test with the tool antenna lightly resting on the valve cap. If after 3 attempts, one or more sensors does not respond or has a low battery, diagnose the TPMS and replace as necessary.
Refer to: Tire Pressure Monitoring System (TPMS) (204-04) .

Tire Pressure Monitoring System (TPMS) Sensor Location Calibration

Special Tool(s) / General Equipment

	204-D081A (204-D081) Tire Pressure Monitor (TPMS)
Ford Diagnostic Equipment	

Programming

NOTE: The TPMS can be placed into learn mode using a diagnostic scan tool or manually where a diagnostic scan tool is not available.

NOTE: The horn sounds once and the TPMS indicator will flashes if the training mode has been entered successfully. If equipped, the message center displays TRAIN LF TIRE.

- NOTE: Enter Training Mode With IDS Scan Tool**
 - Select Chassis.
 - Select TPMS .
 - Select Training Mode.
Use the General Equipment: Ford Diagnostic Equipment
- NOTE: Enter Training Mode With FDRS Scan Tool**
 - Select Toolbox.
 - Select BCM .
 - Select BCM — TPMS Initialization.
Use the General Equipment: Ford Diagnostic Equipment

Ford Factory Shop Manual purchase options www.motorcraftservice.com



M-F150-W8
2021-23MY F-150 (4X4 Super Crew Cab)
Dark Trail Package

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF
FORD PERFORMANCE PARTS © Ford Motor Company 2020

Programming

NOTE: Enter Training Mode Without Scan Tool

1. **NOTE:** *The horn sounds once and the TPMS indicator flashes if the training mode has been entered successfully. If equipped, the message center displays TRAIN LF TIRE.*

With the ignition off, press and release the brake pedal.

2. Using the start/stop switch, position the ignition from OFF to RUN 3 times, ending in the RUN position.
3. Press and release the brake pedal.
4. Position the ignition to OFF position.
5. Using the start/stop switch, position the ignition from OFF to RUN 3 times, ending in the RUN position.

Programming

NOTE: TPMS Sensor Training Procedure

1. **NOTE:** *It may take up to 6 seconds to activate a tire pressure sensor. During this time, the special tool must remain in place at the valve stem.*

Within 2 minutes of the horn sounding, place the special tool on the LF tire sidewall at the valve stem. Press and release the test button on the special tool. The horn briefly sounds to indicate that the tire pressure sensor has been recognized by the BCM .

Use Special Service Tool: 204-D081A (204-D081) Tire Pressure Monitor (TPMS).

2. Within 2 minutes of the horn sounding, place the special tool on the RF tire sidewall at the valve stem and press and release the test button to train the RF tire pressure sensor.
Use Special Service Tool: 204-D081A (204-D081) Tire Pressure Monitor (TPMS).
3. Repeat Step 1 for the RR within 2 minutes of the horn sounding, place the special tool on the RR tire sidewall at the valve stem and press and release the test button to train the RR tire pressure sensor. For LR tires within 2 minutes of the horn sounding, place the special tool on the LR tire sidewall at the valve stem and press and release the test button to train the LR tire pressure sensor. The procedure is completed after the last tire has been trained. When the training procedure is completed, the message center (if equipped) will display TIRE TRAINING COMPLETE. For vehicles not equipped with a message center, successful completion of the training procedure is verified by positioning the ignition to OFF without the horn sounding. If the horn sounds twice when the ignition is positioned to OFF, the training procedure was not successful.
4. Using the scan tool, locate the updated TPMS sensor identifiers trained to the BCM and document them on the applicable warranty claim.
Use Special Service Tool: 204-D081A (204-D081) Tire Pressure Monitor (TPMS).

Ford Factory Shop Manual purchase options www.motorcraftservice.com

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020

5. **NOTE:** *This step is required to clear DTC B1182:55, cause the BCM to exit the manufacturing mode and to make sure there are no other concerns with a newly programmed BCM.*

If the sensors are being trained due to the installation of a new BCM, clear any DTCs and carry out the BCM On-Demand Self Test.

IMPORTANT: After completing the procedure, clear any DTCs.

IMPORTANT: Verify there are no IPC warnings or recurring DTCs.

Cruise Control Radar Alignment (if equipped)

Adjustment

Vertical Alignment

NOTE: *In order to align the CCM, the front bumper trim panel must be removed to access the sensor and the vehicle must be in a wheel alignment bay station so that the vehicle is level.*

NOTE: *Damage to the CCM bracket may affect correct alignment. When aligning the CCM, inspect the CCM bracket for damage and repair as necessary before carrying out the alignment procedure.*

Remove the front bumper trim panel.




E263322

Ford Factory Shop Manual purchase options www.motorcraftservice.com

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020

Place the vehicle on a wheel alignment bay station.

Locate the CCM alignment screws.

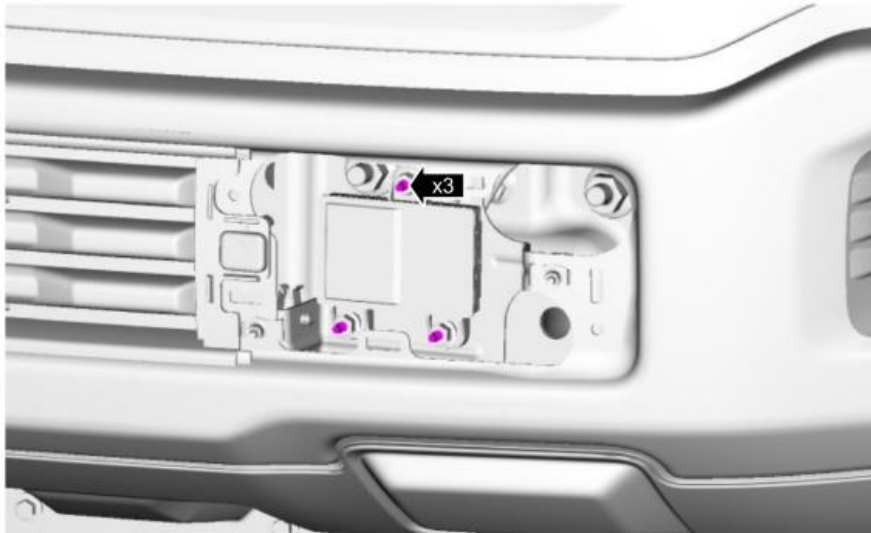

E263323

NOTE: *Typical application shown.*

Place a combination square level on the face of the CCM and check the alignment.



E192283

Ford Factory Shop Manual purchase options www.motorcraftservice.com

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020

Keeping the combination square level on the face of the CCM, adjust the pitch by using an E6 Torx® socket to adjust the screws until the CCM is vertical and level.



E263324

Install the front bumper trim panel.

Horizontal Alignment

NOTE: The horizontal alignment for the CCM is a software calibration that checks that the radar is pointed straight. No manual adjustment is needed for this procedure. The scan tool calibrates the CCM through the CCM procedure in programmable parameters.

NOTICE: The vehicle's engine must be running during the horizontal alignment procedure. Failure to leave the engine running throughout the entire procedure results in the cancellation of the alignment procedure and the system remains non-functional.

Start the engine.

NOTE: DTCs in the ABS and PCM modules can prevent the calibration from completing.

Follow the diagnostic scan tool on-screen instructions to carry-out the CCM calibration procedure

IMPORTANT: After completing the procedure, clear any DTCs.

IMPORTANT: Verify there are no IPC warnings or recurring DTCs.

Ford Factory Shop Manual purchase options www.motorcraftservice.com

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020


Aim headlights

ADJUSTING THE HEADLAMPS

Vertical Aim Adjustment

The headlamps on your vehicle are properly aimed at the assembly plant. If your vehicle has been in an accident, contact an authorized dealer to check and realign your headlamps.

Headlamp Aiming Target

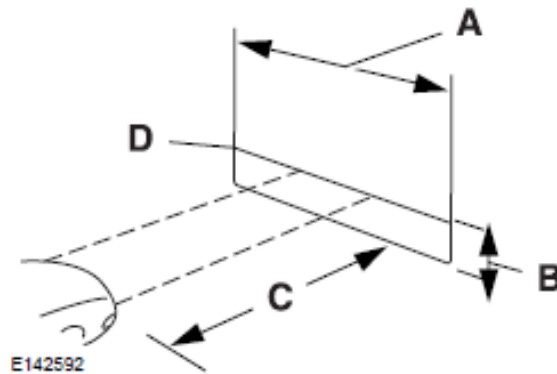

- A 8 feet (2.4 meters).
- B Center height of lamp to ground.
- C 25 feet (7.6 meters).
- D Horizontal reference line.

Vertical Aim Adjustment

1. Park your vehicle directly in front of a wall or screen on a level surface, approximately 25 ft (7.6 m) away.



FORD PERFORMANCE

M-F150-W8
2021-23MY F-150 (4X4 Super Crew Cab)
Dark Trail Package

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF
FORD PERFORMANCE PARTS © Ford Motor Company 2020

2. Measure the height from the center of your headlamp (indicated by a 3.0 millimeter circle on the lens) to the ground and mark an 8 ft (2.4 m) horizontal reference line on the vertical wall or screen at this height (a piece of masking tape works well).

Note: *To see a clearer light pattern for adjusting, you may want to block the light from one headlamp while adjusting the other.*

3. Switch on the low beam headlamps to illuminate the wall or screen and open the hood. Cover one of the headlamps so no light hits the wall.



E167358

4. **For halogen or LED headlamps:** On the wall or screen you will observe a light pattern with a distinct horizontal edge toward the right. If this edge is not at the horizontal reference line, you will need to adjust the beam so the edge is at the same height as the horizontal reference line.

Ford Factory Shop Manual purchase options www.motorcraftservice.com

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020



E163806

5. Locate the vertical adjuster on each headlamp. Use a #2 Phillips screwdriver to turn the adjuster either counterclockwise or clockwise in order to adjust the vertical aim of the headlamp.
6. Repeat Steps 3 through 7 to adjust the other headlamp.
7. Close the hood and turn off the lamps.

Horizontal Aim Adjustment

Horizontal aim is not required for this vehicle and is not adjustable.

IMPORTANT: After completing the procedure, clear any DTCs.

IMPORTANT: Verify there are no IPC warnings or recurring DTCs.



M-F150-W8
2021-23MY F-150 (4X4 Super Crew Cab)
Dark Trail Package

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF
FORD PERFORMANCE PARTS © Ford Motor Company 2020

Torque specifications

Front stabilizer bar link upper nut *Torque*: 111 lb.ft (150 Nm)

Upper ball joint nut *Torque*: 46 lb.ft (63 Nm)

Brake hose bracket bolt *Torque*: 22 lb.ft (30 Nm)

Tie rod end nut *Torque*: 66 lb.ft (90 Nm)

Axle nut *Torque*: 30 lb.ft (40 Nm)

Wheel speed sensor wire bracket bolt *Torque*: 106 lb.in (12 Nm)

Rear shock absorber upper and lower bolts and nuts *Torque*: 66 lb.ft (90 Nm)

Wheel nuts *Torque*: 150 lb.ft (204 Nm)

Front shock upper nuts *Torque*: 52 lb.ft (70 Nm)

Front shock lower bolts *Torque*: 66 lb.ft (90 Nm)

Ford Factory Shop Manual purchase options www.motorcraftservice.com