



M-16601-MPP
Mustang 2018 →
PERFORMANCE PACK 2 FRONT SPLITTER KIT

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020

PRIOR TO INSTALLATION READ THESE INSTRUCTION COMPLETELY
For questions, Call the FORD PERFORMANCE Techline 1-800-367-3788

Please visit <https://www.performanceparts.ford.com> for warranty information



BOM / Kit Contents

1- Upper Splitter Valance (JR3Z-17D957-CA)




1- Lower Splitter (JR3Z-17626-AA)



Ford Factory Shop Manual purchase options www.motorcraftservice.com


NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020

1. Remove the front wheels and tires, alternatively fastener access can be achieved by turning the wheels alternately to right and left
2. On both sides. Remove the push pins and position the inner fender liner aside.

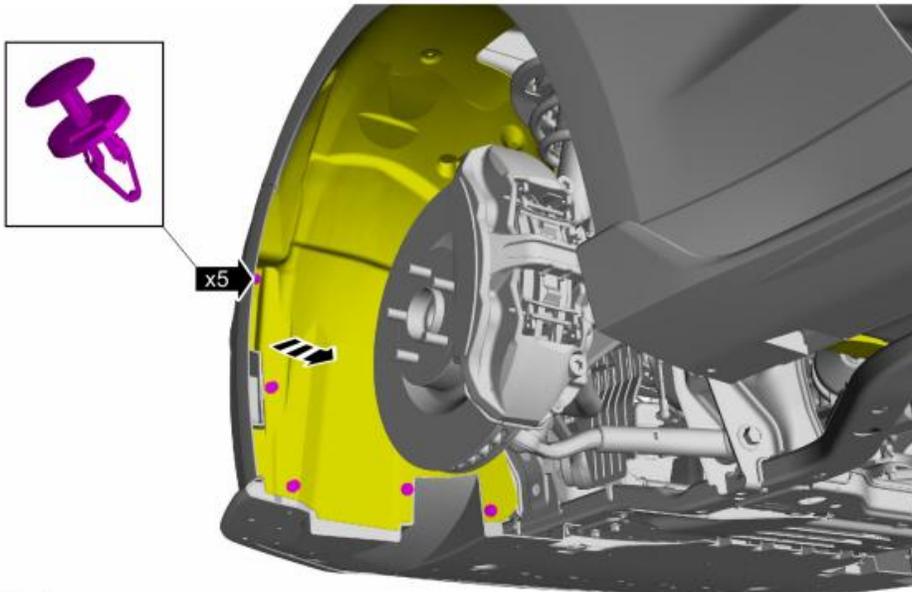

E259835

3. Remove the push pins, screws and the lower air deflector.
Torque: 18 lb.in (2 Nm)

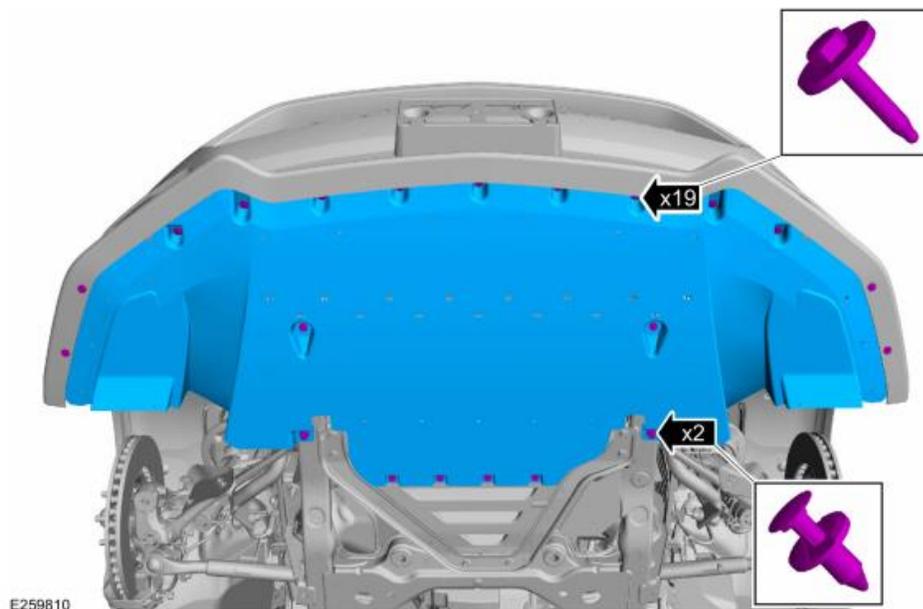


E259810

Ford Factory Shop Manual purchase options www.motorcraftservice.com

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020

4. Remove the bolts, push pins, release the locating tabs and remove the lower spoiler.

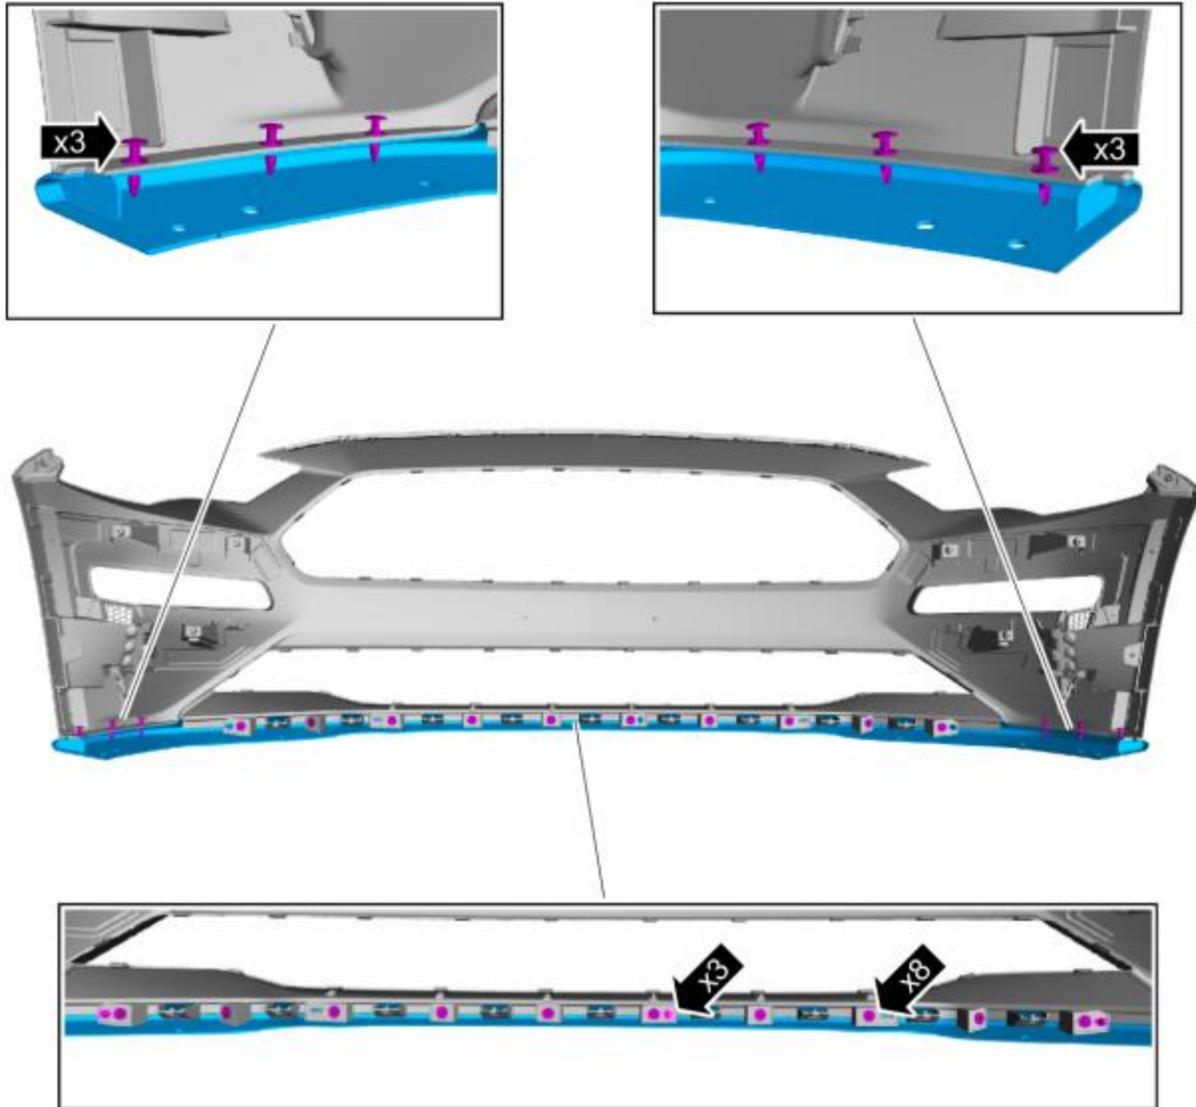


E259926

5. Replace and reinstall the Upper Splitter in place of the lower spoiler removed in Step 5.
6. Install the Lower Splitter per the additional instruction provided specific to the splitter kit attachment.

Ford Factory Shop Manual purchase options www.motorcraftservice.com

Performance Package Level 2 Splitter Installation Instructions


1. Raise front of vehicle to access the fastening locations for the Performance Package Level 2 Splitter. Always use an approved floor jack and jack stands. See Owners Guide for proper jacking instructions.

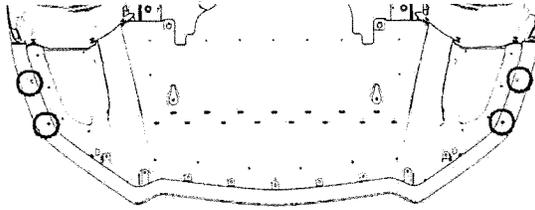

2. Remove (4) screws (W715060-450B) on outboard edges of Belly Pan.


**Note: Screws should be set aside as spares. Replacement screws included in kit.*

3. Remove (4) push-pins (W711035-S300) on the lower/outboard edges of the Front Wheel Liners (2 per side)

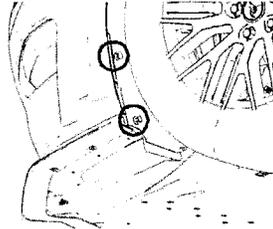


**Note: Push-pins should be set aside as spares. Replacement push-pins included in kit.*

4. Peel back Front Wheel Liners and remove (2) push-pins (W705436-S300) on the outboard/rearward edges of the Front Fascia (1 per side)

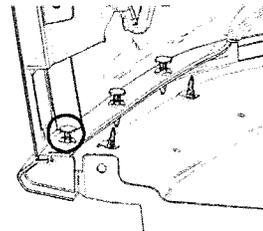


**Note: Push-pins should be set aside as spares. Replacement push-pins included in kit.*


5. "Install Performance Package Level 2 Splitter (JR3B-17D997-A*), starting by hooking on each end to the front fascia, and then hand-starting a screw (W715060-S450B) in the center."

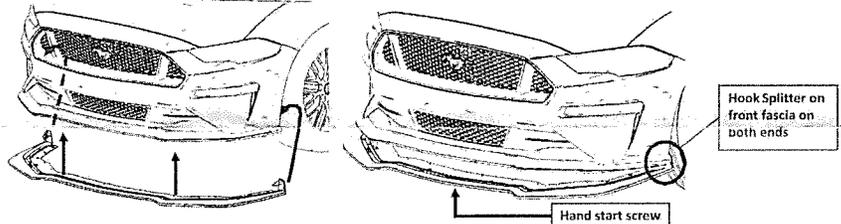


6. "Reinstall fascia push-pin (W705436-S300) and wheel liner push-pins (W711035-S300) from Steps 4 and 3 respectively."

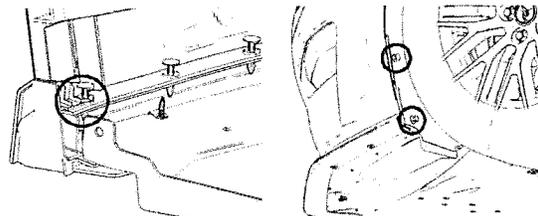

7. Install (12) screws (W715060-S450B) to attach the Performance Package Level 2 Splitter (JR3B-17D997-A*) to the Lower Valance and Belly Pan. Tighten screws securely (reference torque 1.9Nm).

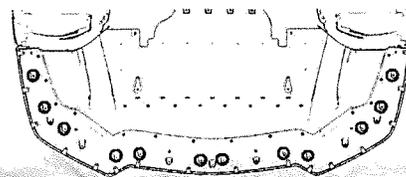

8. Install (21) plastic rivets (W704342-S300) to attach the Performance Plus Splitter (JR3B-17D997-A*) to the Lower Valance and Belly Pan, using a POM rivet tool.

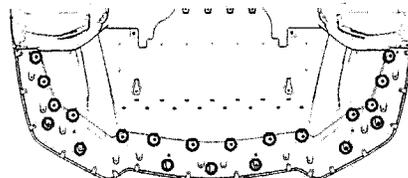

IC P0611401

QTY	PART NUMBER	DESCRIPTION
1	JR3B-17D997-A*	PERFORMANCE PLUS SPLITTER
12	W715060-S450B	SCREW BLACK M4.2x25
21	W704342-S300	PLASTIC RIVET BLACK
2	W705436-S300	PUSH-PIN (FASCIA)
4	W711035-S300	PUSH-PIN (WHEEL LINER)

Revised Oct 23, 2017

IC P0611401