



M-10500-HT
2021+MY Bronco
4DR Hard Top Kit

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF
FORD PERFORMANCE PARTS © Ford Motor Company 2020


PRIOR TO INSTALLATION READ THESE INSTRUCTION COMPETELY
For questions, Call the FORD PERFORMANCE Techline 1-800-367-3788

NOTE: Do not discard this documentation. Retain with the vehicle.

NOTE: Some early 21MY Broncos may not support functionality of hard top rear defroster, rear windshield wiper, & rear washer fluid nozzle. Functionality is available on vehicles built with "SOFT TOP, CLOTH W/ PREP KIT" option (verify on window sitcker). Or contact your Dealer or the Techline for assistance (Search the VIN on PTS to look up the window sticker).

NOTE: When opening the crate and removing the hard top, be careful of exposed screws or nails.

1. Before installation, clean the hard top following the Owner's Manual.

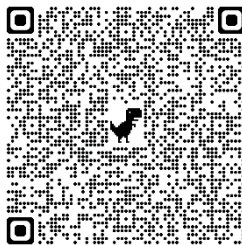

2. Remove the soft top following the Owner's Manual.



3. Removing and installing the hard top following the Owner's Manual.

NOTE: Prior to first installation of the hard top, review the next pages to determine if additional component assembly is required depending on your vehicle build configuration and model year.



Ford Factory Shop Manual purchase options www.motorcraftservice.com

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF
 FORD PERFORMANCE PARTS © Ford Motor Company 2020

4. Verify hard top alignment.



Hard Top Kit Packing List

Fasteners for Rear Cap

(12) W721071-S450B

Mid Panel Latch Brackets

(1) LH Bracket

(2) RH Bracket


(6) Fasteners W721070-S450B



Z-Brackets

(1) LH Bracket with (2) Fasteners

(1) RH Bracket with (2) Fasteners

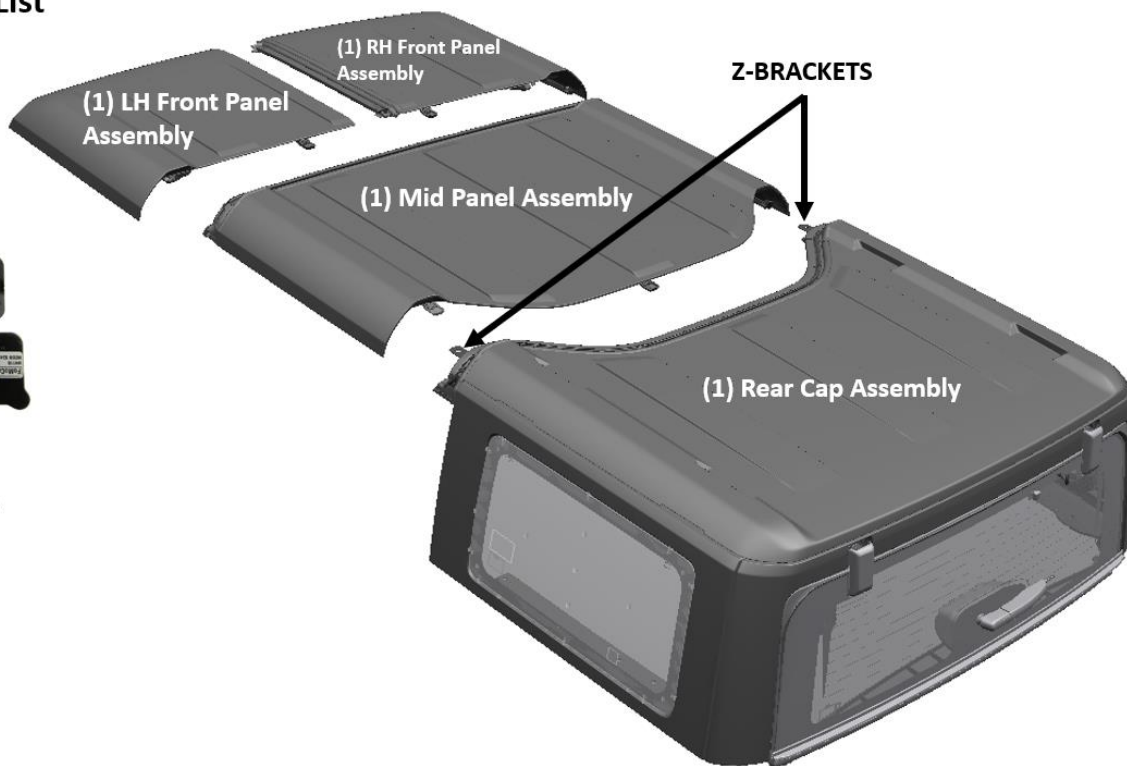

Ford Factory Shop Manual purchase options www.motorcraftservice.com

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF
FORD PERFORMANCE PARTS © Ford Motor Company 2020

21-23MY Bronco Z-Bracket Removal & Installation



NOTE: Removal steps in this procedure may contain installation details.

1. On both sides, remove the 2 fasteners and the hard top rear cap brackets. *Torque: 44 lb.in (5 Nm)*



2. To install, reverse the removal procedure with the provided Z-brackets.

NOTE: 21-23MY 4DR Bronco hard top requires 10 bolts to attach the rear cap to the body.

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF
FORD PERFORMANCE PARTS © Ford Motor Company 2020

Hard Top Mid Panel Latch Bracket Installation

NOTE: The following installation is not required for vehicles built with the "SOFT TOP, CLOTH W/ PREP KIT" option.



NOTE: LH shown, RH similar.

1. Above the B-pillar, install the bracket using 3 fasteners (W721070-S450B). Torque: 177 lb.in (20 Nm)



Hard Top Removal From The Wooden Crate

1. Before removing the hard top from the wooden crate or foam blocks, use painters tape to securely hold down the rear glass to prevent accidental opening during movement and installation on the vehicle.
2. Remove painters tape once installation of the hard top is complete.