



M-15200K-BFLK
2025 Bronco
Off-Road Fog Light Kit

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF
FORD PERFORMANCE PARTS

PRIOR TO INSTALLATION READ THESE INSTRUCTIONS COMPLETELY

For questions, Call the FORD PERFORMANCE Techline 1-800-367-3788

Please visit <https://www.performanceparts.ford.com> for warranty information

RECOMMENDED TOOLS:

- Socket Set
- Torque Wrench
- Trim Removal Tool
- Wire Splice Kit



BRONCO OFF-ROAD FOG LIGHT KIT

Part Number: M-15200K-BFLK

Content: Installation

M-15200K-BFLK

2025 Bronco

Off-Road Fog Light Kit

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF
FORD PERFORMANCE PARTS

PRIOR TO INSTALLATION READ THESE INSTRUCTIONS COMPLETELY

For questions, Call the FORD PERFORMANCE Techline 1-800-367-3788


Please visit <https://www.performanceparts.ford.com> for warranty information

IMPORTANT NOTES:


NOTE: Removal steps in this procedure may contain installation details.

NOTE: LH (left hand) side shown, RH (right hand) side similar.

1. With the vehicle in NEUTRAL, position it on a hoist.
2. Remove the fasteners and the engine front undershield.
Torque: 124 lb.in (14 Nm)

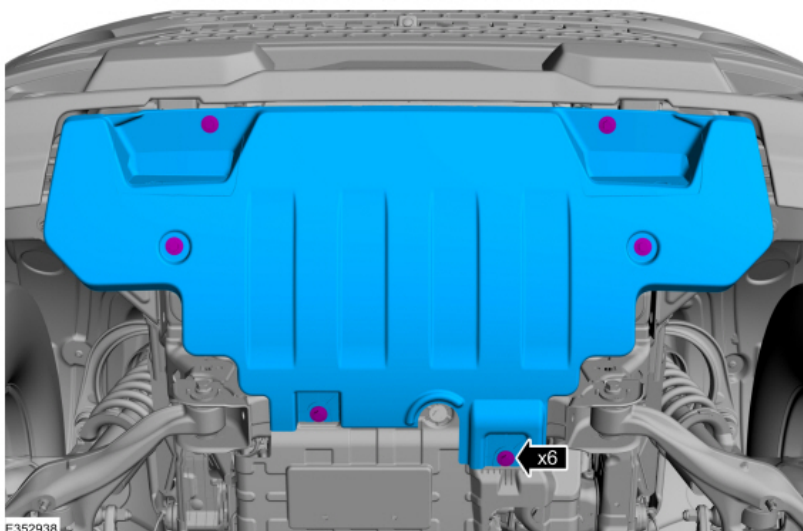

3. Remove the front fog lamp.
 - a. Disconnect the front fog lamp electrical connector.
 - b. Remove the screws and the front fog lamp.

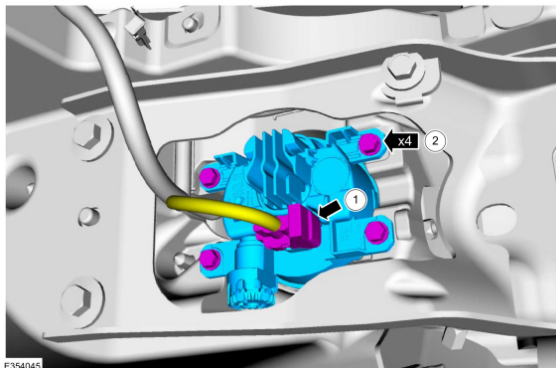



M-15200K-BFLK
2025 Bronco
Off-Road Fog Light Kit

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF
FORD PERFORMANCE PARTS

PRIOR TO INSTALLATION READ THESE INSTRUCTIONS COMPLETELY

For questions, Call the FORD PERFORMANCE Techline 1-800-367-3788

Please visit <https://www.performanceparts.ford.com> for warranty information

Installation

To install, reverse the removal procedure. Install the Rigid fog assemblies using factory bolts. Adjust the aiming if needed. These lamps come with front beauty rings to cover the gap and Rigid designed mounts that are like factory ones.

NOTE: The lamp comes with 2 wire pigtails, power and ground. Using the Rigid provided jumper cables (blunt leads at one end, mating connector to Ford fog harness at the other end) and a Ford approved splice kit, splice the lamp wiring leads into the jumpers, then plug into the factory fog harness. Zip tie the wiring if too long.

END OF INSTRUCTIONS - M-15200K-BFLK