



M-16600-MG,MM  
2024+MY Mustang Coupe  
Carbon Fiber Spoiler With Gurney Flap

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF  
FORD PERFORMANCE PARTS © Ford Motor Company 2020

**PRIOR TO INSTALLATION READ THESE INSTRUCTIONS COMPLETELY**  
**For questions, Call the FORD PERFORMANCE Techline 1-800-367-3788**

Please visit <https://www.performanceparts.ford.com> for warranty information



Ford Factory Shop Manual purchase options [www.motorcraftservice.com](http://www.motorcraftservice.com)

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF  
FORD PERFORMANCE PARTS © Ford Motor Company 2020

### BOM

Carbon Fiber Spoiler With Gurney Flap	QTY 1
Bolt & Washer W722355-S442	QTY 2
Gurney Flap Screw	QTY 4

**NOTE: IF APPLICABLE, INSTALL THE CARBON FIBER DECKLID APPLIQUE BEFORE INSTALLING THE CARBON FIBER SPOILER**

### Removal

**NOTE:** Removal steps in this procedure may contain installation details.

**NOTE:** The following steps are for upper spoiler.

**NOTE:** Dark Horse Spoiler shown, GT spoiler similar.


1. Remove the rubber grommets.



E421736


NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF  
FORD PERFORMANCE PARTS © Ford Motor Company 2020

2. Remove the bolts.  
Torque: 71 lb.in (8 Nm)

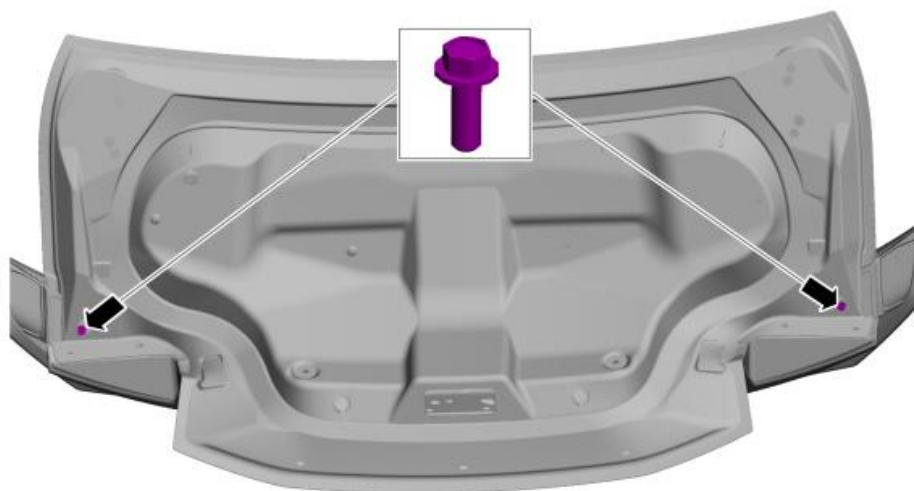

E421737

4. Using a non-marring trim tool, detach the retainers and remove the upper spoiler.  
Use the General Equipment: Interior Trim Remover

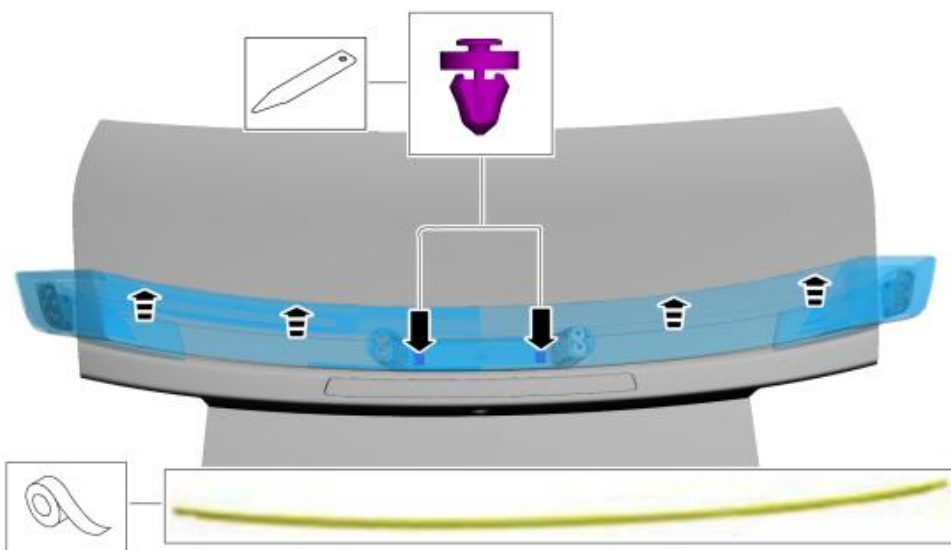


E421738

Ford Factory Shop Manual purchase options [www.motorcraftservice.com](http://www.motorcraftservice.com)

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF  
FORD PERFORMANCE PARTS © Ford Motor Company 2020


5. Clean any residual adhesive and dirt from the surface.

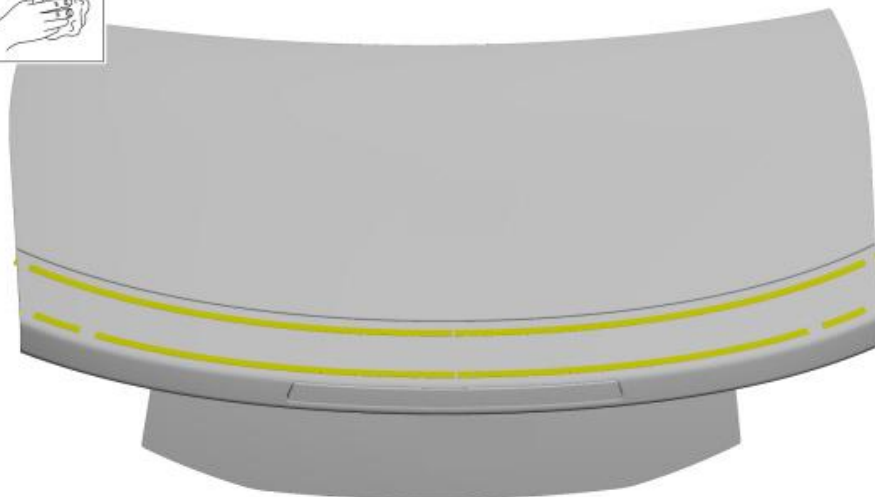

E421740

## Installation

1. Remove the plastic pins from the original spoiler and swap them onto the carbon fiber spoiler.

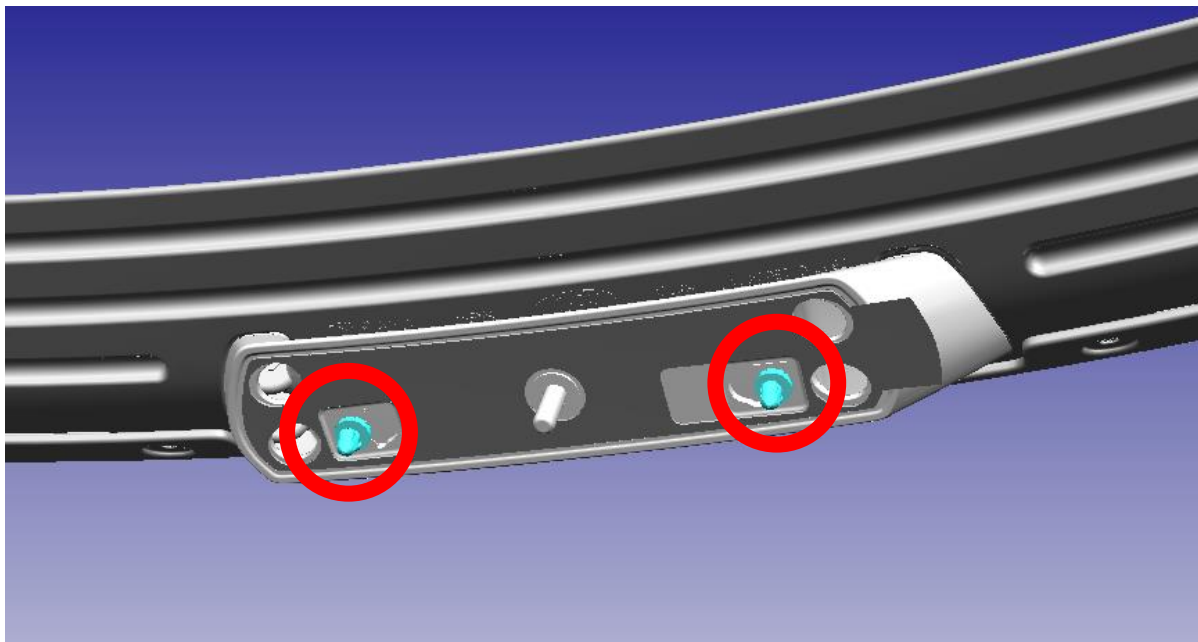

Ford Factory Shop Manual purchase options [www.motorcraftservice.com](http://www.motorcraftservice.com)



M-16600-MG,MM  
2024+MY Mustang Coupe  
Carbon Fiber Spoiler With Gurney Flap

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF  
FORD PERFORMANCE PARTS © Ford Motor Company 2020

2. Remove the protective film from the 2 sided tape on the carbon spoiler

**NOTE:** *When installing the spoiler, apply approximately 15 lbs. of pressure along the length of the spoiler to ensure adhesion of the two-side tape.*

3. To finish install, reverse the removal procedure.

### Care Instructions

Carbon fiber products are durable, but still requires care and maintenance to stay looking good. More specifically, keep the products clean and minimize exposure to the sun. Gloss finish products should be waxed with a car care product designated for clear coat finishes (non-abrasive). Matte finish products should not be waxed, surface may become spotty. Grease or fingerprints may be reduced from matte finish with rubbing alcohol. Do not use high heat to apply wrap, PPF or ceramic coating as the heat may damage the clear finish and/or the resin within the carbon fiber product. Do not drive your vehicle equipped with carbon fiber products through an automated or commercial car wash due to the high-water pressure, high water temperature and unknown soap content. Wash your vehicle by hand with low water pressure, low water temperature and a quality automotive grade Ph neutral soap formulated to minimize scratching and fading (intended for late model clear coat finishes). Do not use a high-pressure wand on carbon fiber surfaces.

Ford Factory Shop Manual purchase options [www.motorcraftservice.com](http://www.motorcraftservice.com)