




NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD PERFORMANCE PARTS © Ford Motor Company 2020

**PRIOR TO INSTALLATION READ THESE INSTRUCTION COMPETELY**  
**For questions, Call the FORD PERFORMANCE Techline 1-800-367-3788**

Please visit <https://www.performanceparts.ford.com> for warranty information

**NOTE:.** *Typical application shown.*

1. Mark for the cut, FPP recommends 7 inches. (Fig. 1)
2. Using a chain cutter, saws-all, or similar tool, cut the tailpipe at the mark. Deburr the freshly cut exhaust pipe if needed. (Fig. 2)
3. Slide the supplied clamp over the tailpipe, then slide the tip onto the tailpipe.
4. Positioning the tip approximately 1" in from the outermost edge of the truck (recommended), rotate until the logo is in the proper location to be read. Slide the clamp on the tip, aligning with the edge and keeping the "hourglass" off the notch. Tighten the clamp to 48Nm (35 ft-lb). (Fig. 3, 4)

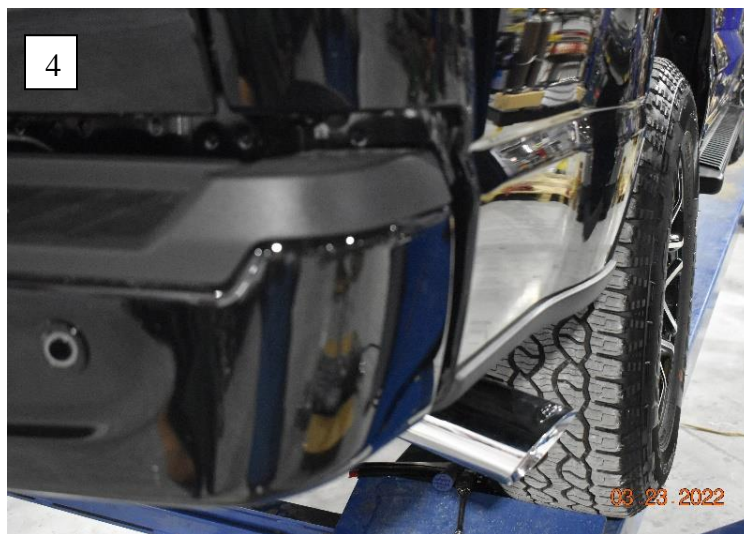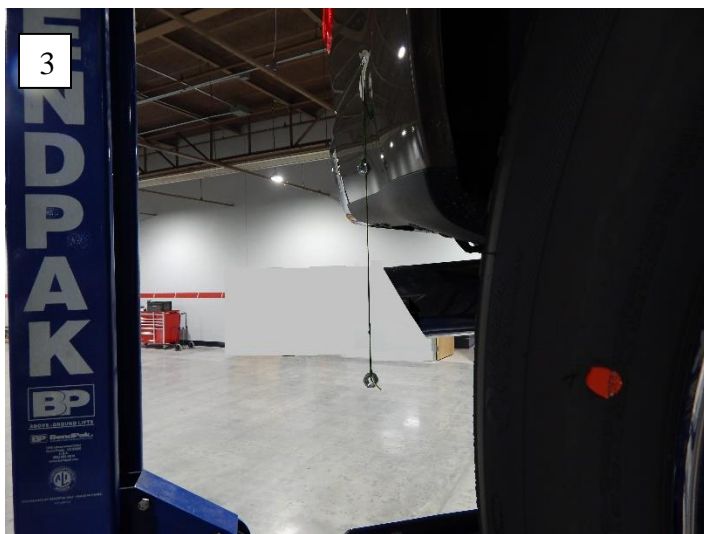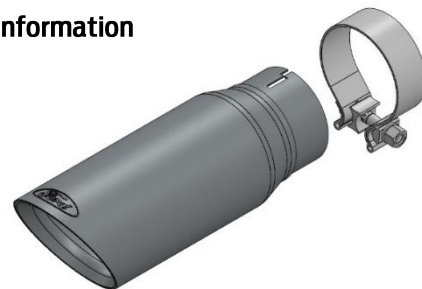

Ford Factory Shop Manual purchase options [www.motorcraftservice.com](http://www.motorcraftservice.com)