FORD PERFORMANCE

M-1447-BSGS, BSMB
2021+MY Bronco
“Bronco” Script Emblem Kit

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF
FORD PERFORMANCE PARTS © Ford Motor Company 2020

PRIOR TO INSTALLATION READ THESE INSTRUCTION COMPETELY
For questions, Call the FORD PERFORMANCE Techline 1-800-367-3788

Please visit https://www.performanceparts.ford.com for warranty information




Ford Factory Shop Manual purchase options www.motorcraftservice.com

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF
FORD PERFORMANCE PARTS © Ford Motor Company 2020

Kit contents:

Description	Quantity
“Bronco” Script Emblem	2

Special Tool(s) / General Equipment

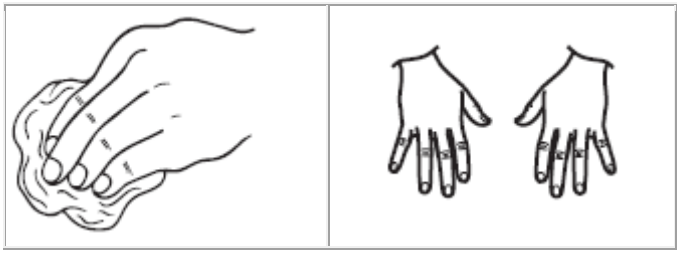

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF
FORD PERFORMANCE PARTS © Ford Motor Company 2020

Installation

NOTE: Allow sheet metal to reach room temperature for approximately one hour.

1. Wipe surface with an alcohol cleaning wipe to clean any contamination and let dry.

2. Install emblem and apply 10lbs to 15lbs of force to the accessory surface. Apply force/pressure across the length of the part where the tape is located for 1 in/second.